



INSTALLATION MANUAL

SAFETY INFORMATION

! WARNING

FIRE OR EXPLOSION HAZARD

Failure to follow safety warnings exactly could result in serious injury, death, or property damage.

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

- WHAT TO DO IF YOU SMELL GAS:

- Do not try to light any appliance.
- Do not touch any electrical switch; do not use any phone in your building.
- Immediately call your gas supplier from a neighbour's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

- Installation and service must be performed by a qualified installer, service agency, or the supplier.

This appliance may be installed in an aftermarket, permanently located, manufactured home (USA only) or mobile home, where not prohibited by local codes.

This appliance is only for use with the type of gas indicated on the rating plate. This appliance is not convertible for use with other gases, unless a certified kit is used.

INSTALLER:

Leave this manual with the appliance


CONSUMER:

Retain this manual for future reference



PATENT PENDING

(Installation Option 2 illustrated)

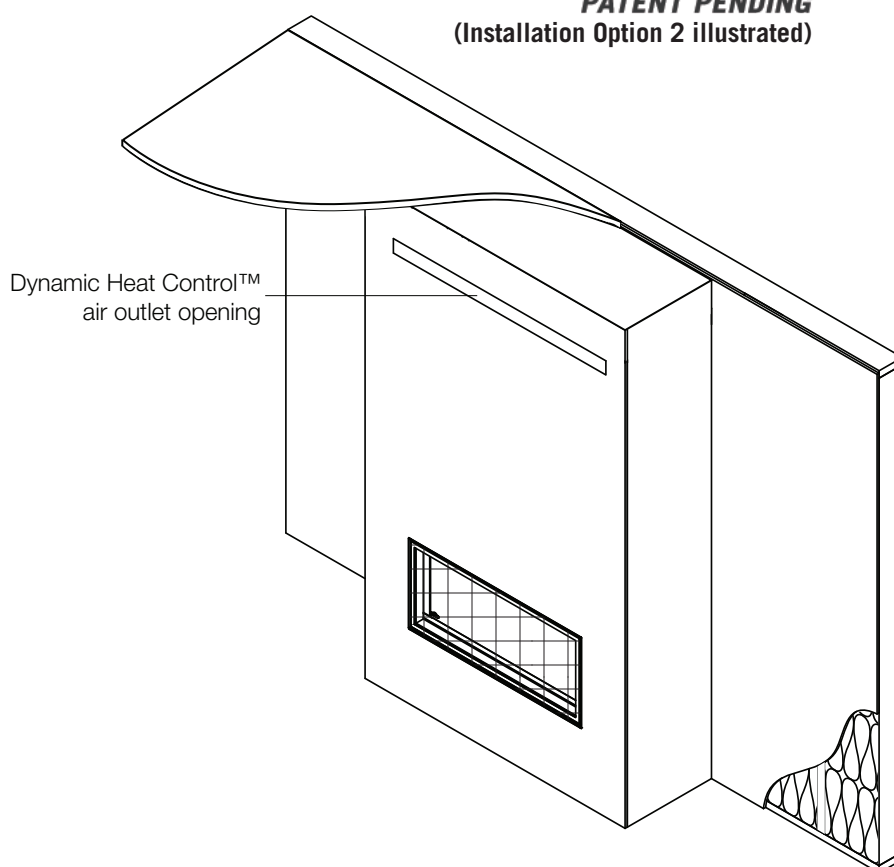

FOR INDOOR USE ONLY

CERTIFIED TO THE CANADIAN AND AMERICAN NATIONAL STANDARDS:
CSA 2.22 AND ANSI Z21.50 FOR VENTED DECORATIVE GAS APPLIANCES

FOR USE WITH VECTOR™ MODELS ONLY

LV38N/P-1 / LV38N/P2-1 / LV50N/P-2 / LV50N/P2-2 /
LV62N/P / LV62N/P2 / LV74N/P / LV74N/P2
(STANDARD ON ALL LUXURIA™ MODELS)



Wolf Steel Ltd., 24 Napoleon Rd., Barrie, ON, L4M 0G8 Canada / 103 Miller Drive, Crittenden, Kentucky, USA, 41030
Phone 1 (866) 820-8686 • www.napoleon.com • hearth@napoleon.com

table of contents

1.0	general information	3
2.0	installation planning	4
2.1	installation option 1 - open enclosure (enclosure stops short of the ceiling)	5
2.2	installation option 2 - front opening	5
2.3	installation option 3 - rear opening	6
2.4	installation option 4 - open enclosure with hard combustible valance	7
3.0	appliance overview	8
4.0	Dynamic Heat Control™ installation	9
4.1	high limit switch installation	11
5.0	minimum framing dimensions	13
6.0	minimum clearance to combustible enclosures	14
7.0	rough framing - before appliance installation	16
8.0	finish framing - after appliance installation	17
9.0	fastener placement restriction	22
10.0	finishing	23
10.1	enclosure design	24
10.2	optional trim finishing	25
11.0	minimum combustible mantel clearances	26
12.0	maximum protrusion	27
13.0	Dynamic Heat Control™ installation checklist	28

note:

The information throughout this manual is believed to be correct at the time of printing. Wolf Steel Ltd. reserves the right to change or modify any information within this manual at any time without notice. Changes, other than editorial, are denoted by a vertical line in the margin.




WARNING: This product can expose you to chemicals including chromium, which are known to the State of California to cause cancer, and chemicals including toluene, which are known to the State of California to cause birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.


! WARNING

- **Dynamic Heat Control™ MUST** be installed during the installation of the appliance **BEFORE** appliance venting and gas are installed.
- Ensure the appliance is completely cool before starting installation.
- To avoid danger of suffocation keep the packaging bag away from babies and children. Do not use in cribs, bed, carriages, or play pens. This bag is not a toy. Knot before throwing away.

You will need:

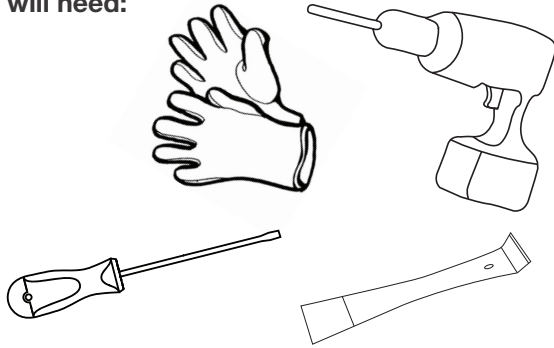

Included in this kit

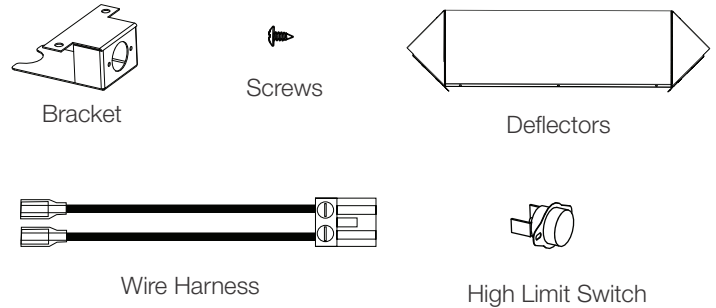

Dynamic Heat Control™ is a system for managing the heat produced by the appliance at and around the fireplace. The purpose of the **Dynamic Heat Control™** is to move the heat away from the fireplace to allow it to circulate more effectively within the living space. By installing the **Dynamic Heat Control™** both the installer and the user gain considerable benefits, see the following;

Installer:

- Ability to use combustible framing and finishing right up to the fireplace opening.*
- High temperatures above the front of the fireplace opening are significantly reduced eliminating potential degrading to sensitive finish material (cracks or discoloration).
- No additional electrical, fans, ducts, or manifolds are required which keeps installation straightforward.

User:

- Heat is circulated more consistently throughout the living space increasing comfort in front of the fireplace.
- Increased “real world” efficiency as heat is moved into the room rather than retained inside the enclosure.
- Complete flexibility in selection of finish materials.
- Ability to place a TV, sound bar or artwork above the fireplace.**

The **Dynamic Heat Control™** system relies on an optimized flow of air both through the appliance and the enclosure. As such the installation of the **Dynamic Heat Control™** system requires certain technical considerations when compared to traditional fireplaces. Specifically, the **Dynamic Heat Control™** requires the **enclosure to be ventilated** and requires the installer to ensure that a minimum air outlet opening area is provided to allow heat to escape and circulate at a prescribed minimum height and position. This **must** be carefully adhered to in the planning and the installation to ensure the appliance functions safely and to minimize installation time.

***In most common installation configurations, some specific installations require special provisions.**


See “minimum clearance to combustible enclosures” section for details. Ensure to strictly adhere to instructions.

**** Always check appliance manufacturers’ recommendations to confirm suitability and any special environmental limitations. For valuable or antique items, always refer to expert preservation instructions as some items require specifically controlled temperature and/or humidity.**

2.0 installation planning

! WARNING

- Do NOT cover or place any items in the **Dynamic Heat Control™** air outlet. Failure to comply with these instructions will create a fire hazard.
- Ensure air flow within the air passage is not restricted in any way with the exception of approved venting.

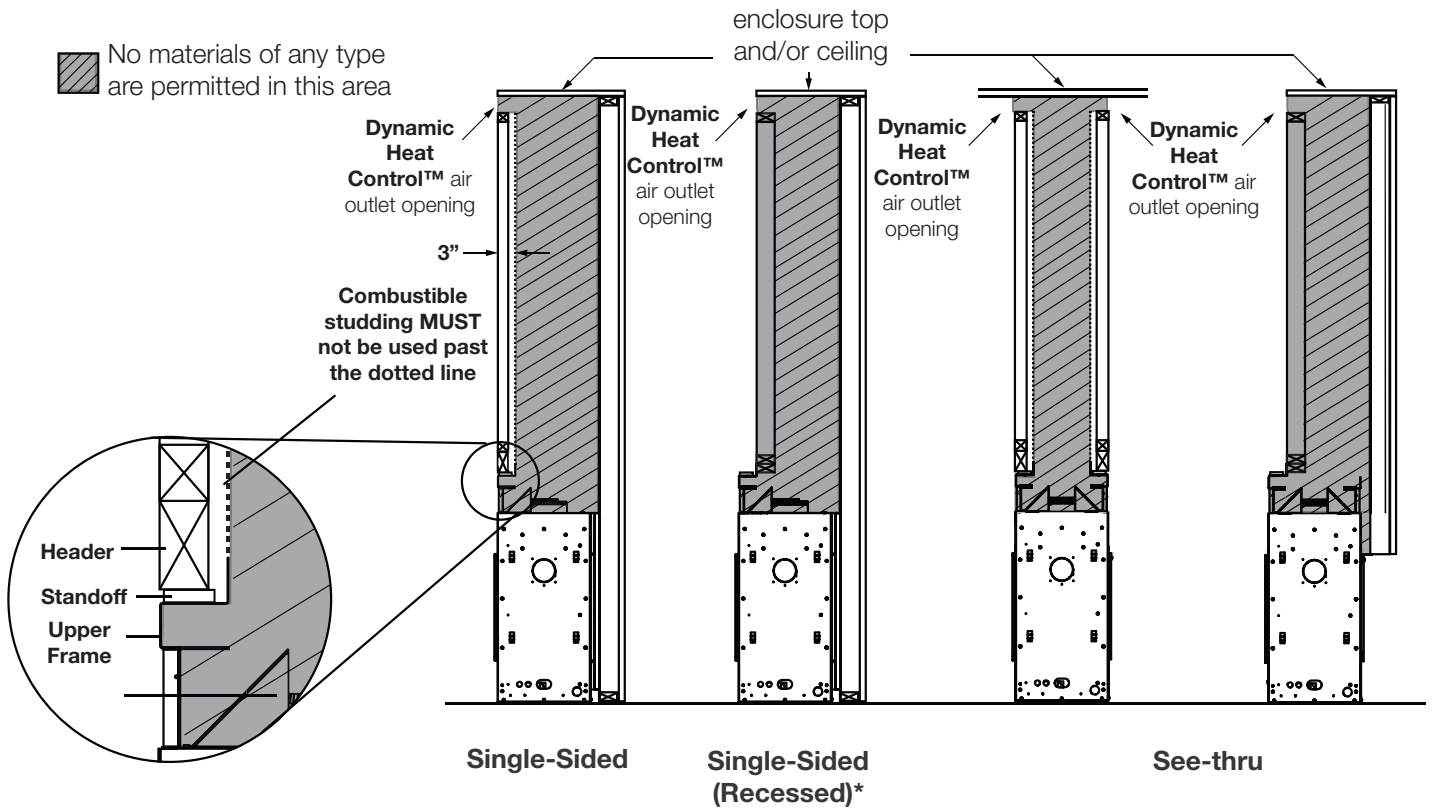

*Restrictions also apply to see-thru when one or more recess is used.



Air flow in the shaded area **must** not be restricted in any way with the exception of an approved appliance vent system. No other items are allowed in this area.

Shaded framing **must** use non-combustible materials. No combustible materials allowed in this area or the space between studs (i.e. no wiring, conduits, electrical bores, combustible framing members, AV equipment, finishing brackets, framing, etc.)

2.1 installation option 1 - open enclosure (enclosure stops short of the ceiling)

NOT suitable for Dynamic Heat Control™ Plus



Installation Option 1 (open enclosure) leaves a complete air outlet opening above the enclosure to provide the necessary air circulation path for the **Dynamic Heat Control™** system. This has been found to be well accepted with respect to final appearance and offer minimal distraction. It also allows for efficient circulation of air within the room. This option offers the simplest method for framing and installation. Limit the air outlet opening height to 4" to reduce the risk of items inadvertently falling into the enclosure. **The air outlet opening must extend around the entire perimeter, or the entire front face of the enclosure, where the enclosure runs from wall to wall.**

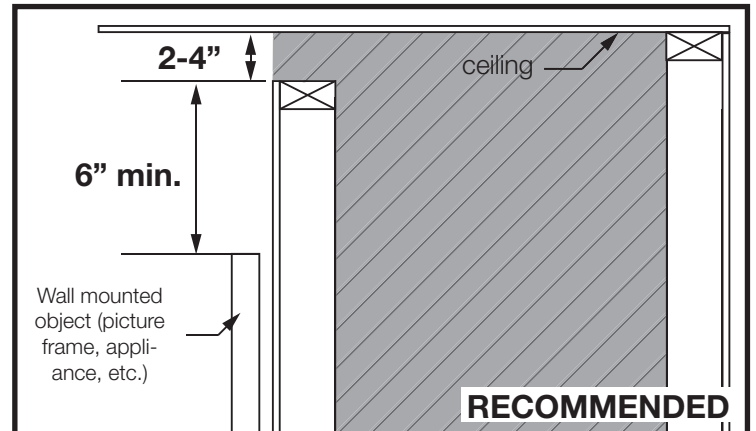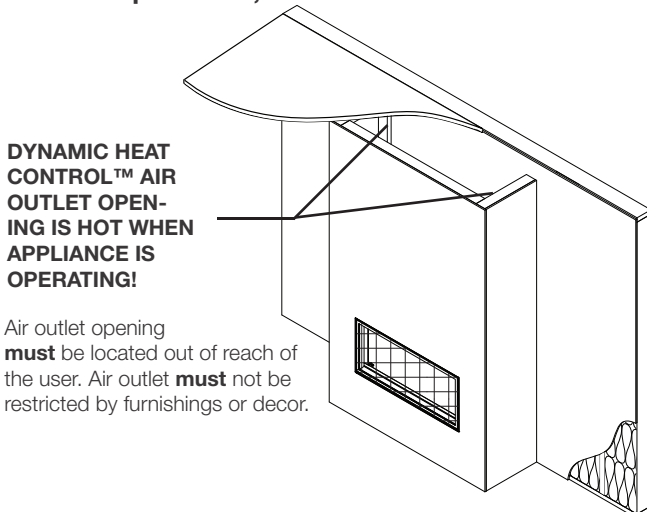

2.2 installation option 2 - front opening

Suitable for Dynamic Heat Control™ Plus

Installation Option 2 (front opening) requires an air outlet opening to be framed no more than 1.5" below the enclosure top to avoid trapping heat in the upper areas and the air outlet opening centered on the appliance center. Minimum air outlet opening dimensions **must** be followed. **Framing the air outlet opening lower will overheat the appliance, the enclosure, and finishing material.**

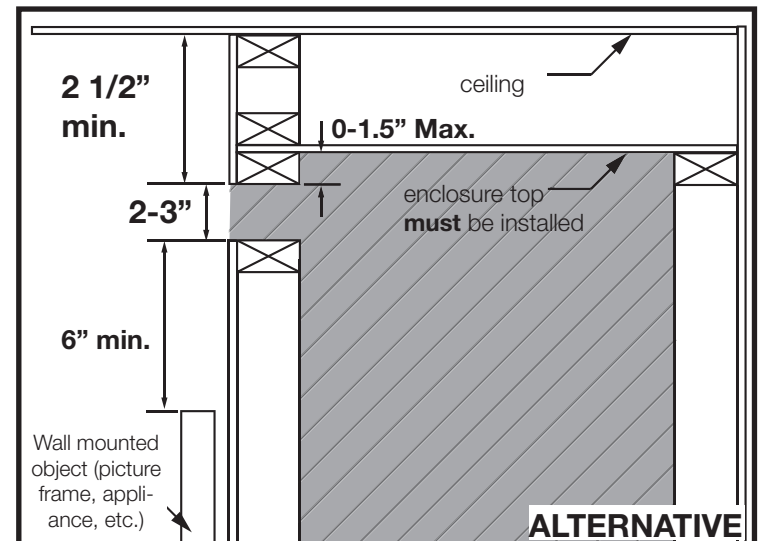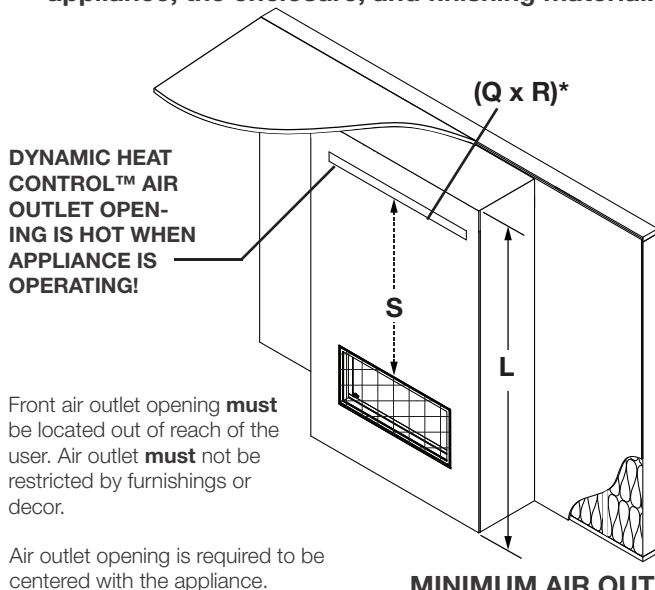

MINIMUM AIR OUTLET OPENING DIMENSIONS

	LV38-1	LV50-2	LV62	LV74
(Q x R)*	80 sq. in. minimum (Q must be 2-3")		160 sq. in. minimum (Q must be 2-3")	
S	This dimension is determined from the enclosure height (L) minus the distance to the top of the Dynamic Heat Control™ air outlet opening (0"-1.5"), height of the air opening (2"-3"), and the distance from the base of the appliance to the top of the appliance viewing area (25 11/16").			


***Free area. Any trim edging or finishing must not reduce or restrict minimum area. Grills, grates, louvers, or other unapproved covers are not permitted and will cause a fire hazard.**

installation planning

2.3 installation option 3 - rear opening

Suitable for Dynamic Heat Control™ Plus


Installation Option 3 (rear opening) requires an air outlet opening to be framed no more than 1.5" below the enclosure top to avoid trapping heat in the upper areas and centered on the appliance center. Minimum air outlet opening dimension **must** be followed. The opening is required. **Framing the rear opening lower will overheat the appliance, the enclosure, and finishing material.**

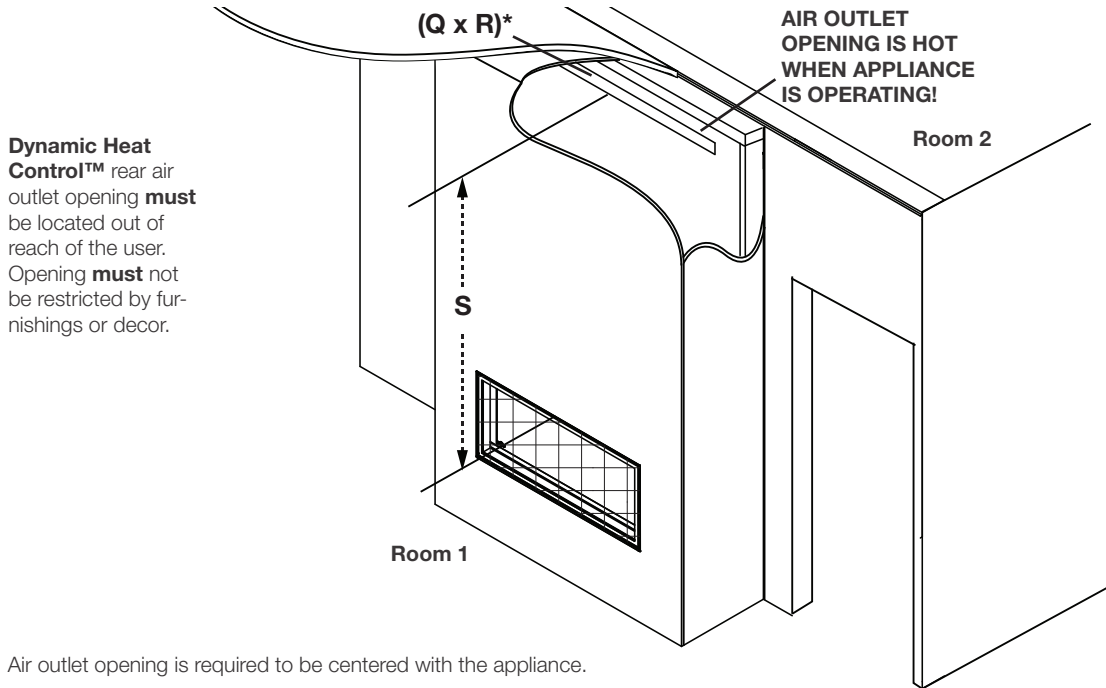

Air outlet opening is required to be centered with the appliance.

! WARNING

- When using a rear air outlet opening, it is critical that the adjoining room or living spaces are in direct air communication (i.e. of an open plan configuration or connected by a permanently open doorway or archway). This prevents the appliance from being in a negative pressure more than that of the adjoining room. Failure to follow these requirements can result in reversing the Dynamic Heat Control™ air flow and will cause the appliance, safety barrier, and finishing materials to overheat, creating a fire hazard.

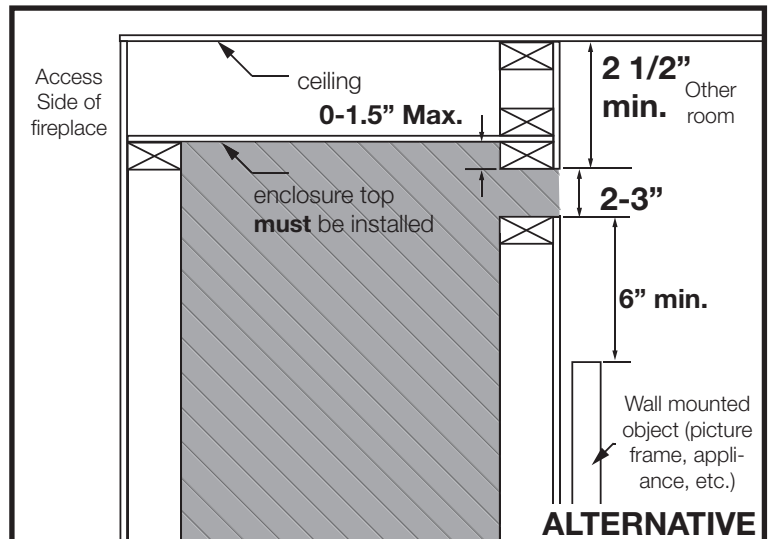

note:

Increasing the air outlet opening will allow the appliance, the barrier, the temperatures on the surfaces above the fireplace opening, and the enclosure be at cooler temperatures. It will also allow the air to circulate more effectively in the room. **However, if the appliance is equipped with the Dynamic Heat Control™ Plus, then the opening size must be 80 sq. in. for models LV38-1, LV50-2, LVX38(-1), and LVX50(-1), or 160 sq. in. for models LV62, LV74, LVX62(-1), and LVX74(-1).**

note:

See-thru appliances require front or rear air outlet opening. If desired, it can be installed with both front and rear air outlet openings to allow heat to circulate in two rooms, however, it is recommended to install the air outlet opening at different heights that meet the installation parameters for aesthetic purposes. For **Dynamic Heat Control™ Plus**, a second opening **MUST NOT** be installed.

2.4 installation option 4 - open enclosure with hard combustible valance


NOT suitable for Dynamic Heat Control™ Plus

Installation Option 4 (open enclosure with hard combustible valance) is similar to **Installation Option 1** with the addition of a hard combustible valance. Minimum opening dimensions and valance dimensions **must** be followed. **Restricting air movement within the valance area will overheat the appliance, the enclosure, and finishing material.**


note:

Air outlet opening must be at least continuous around the top of the enclosure for a valance to be permitted. Using the minimum air outlet opening from **Installation Option 2** and **Option 3** is not permitted and will overheat the appliance.

DYNAMIC HEAT CONTROL™ AIR OUTLET OPENING IS HOT WHEN APPLIANCE IS OPERATING!

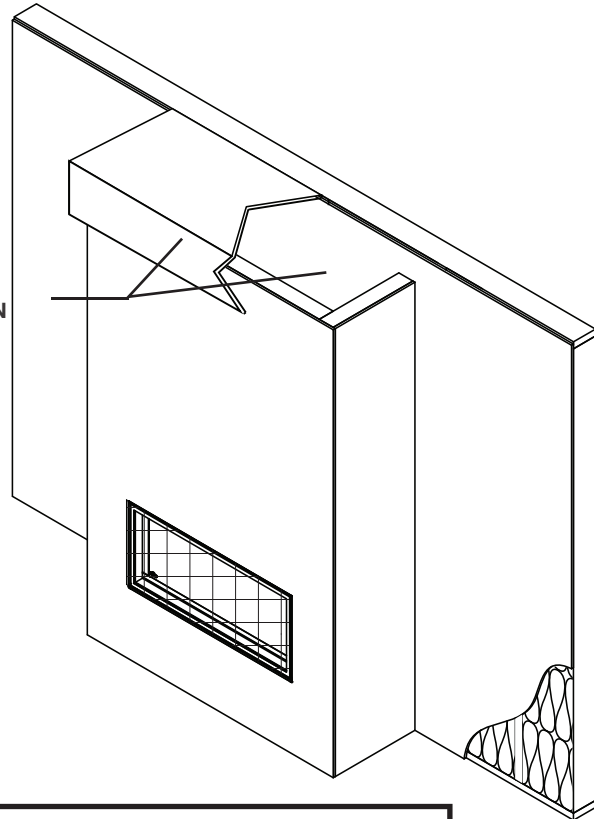


Air outlet opening must be located out of reach of the user.
Air outlet **must** not be restricted by furnishings or decor.

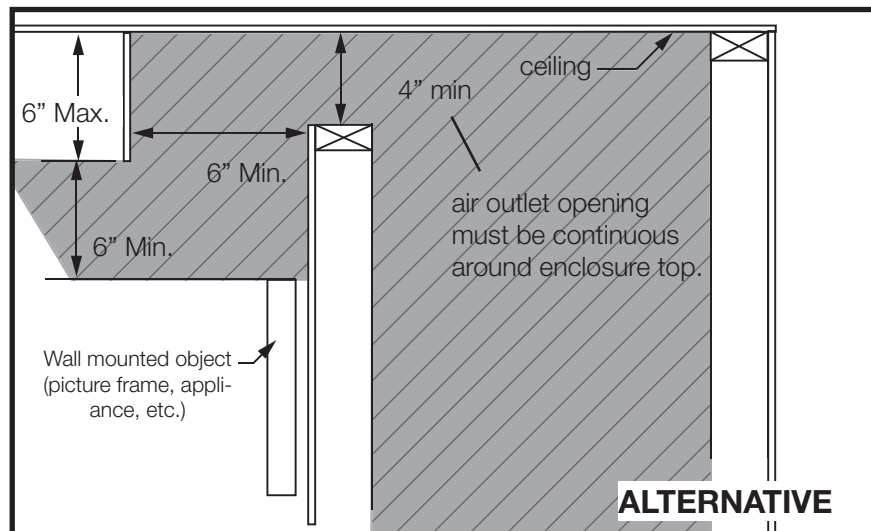


ABSOLUTELY NO OBSTRUCTION OR RESTRICTION ALLOWED IN THE ENTIRE SHADED AREA WITH THE EXCEPTION OF APPROVED VENTING

3.0 appliance overview

SINGLE-SIDED INSTALLATION

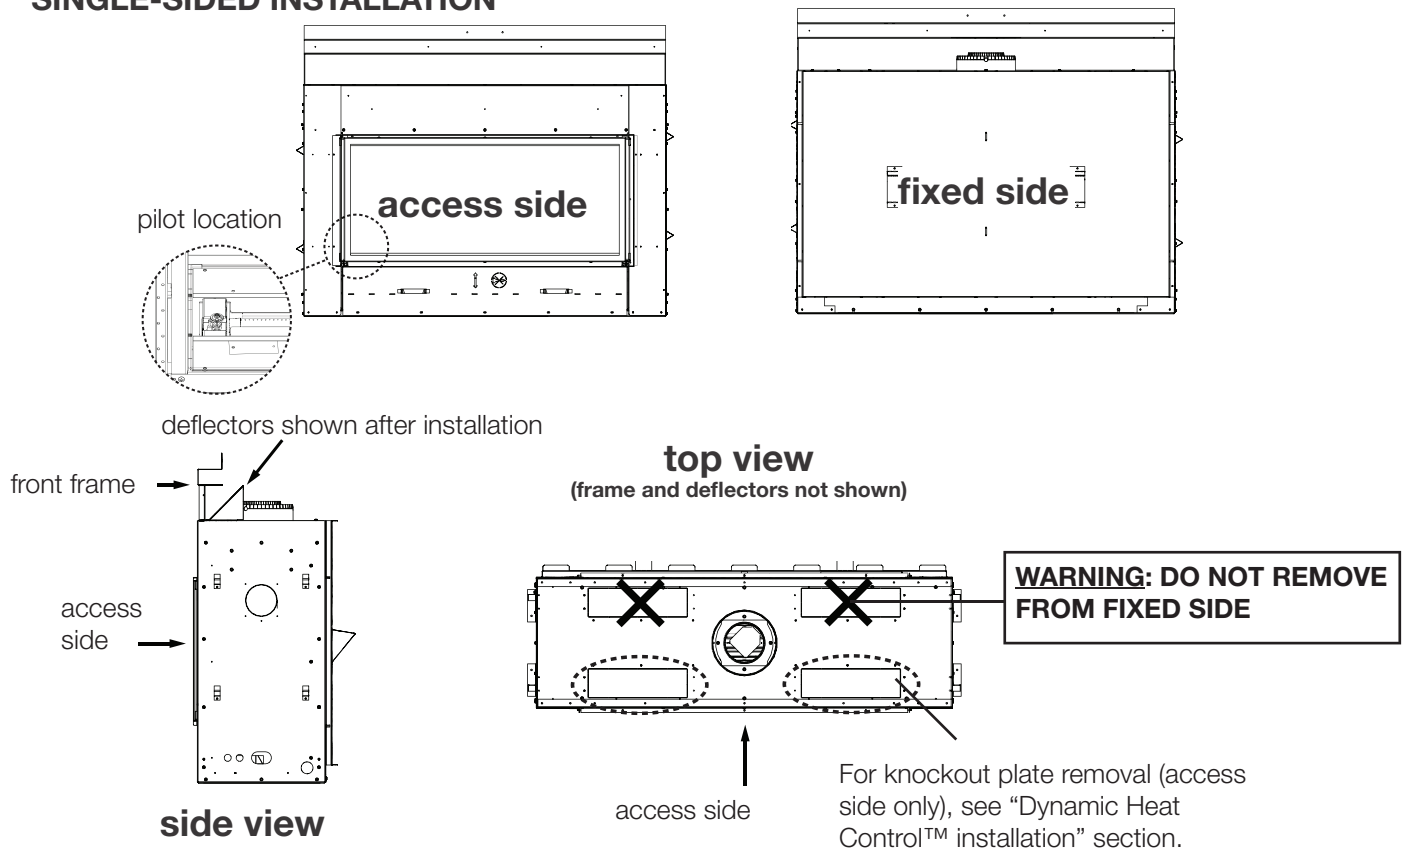

SEE-THRU INSTALLATION

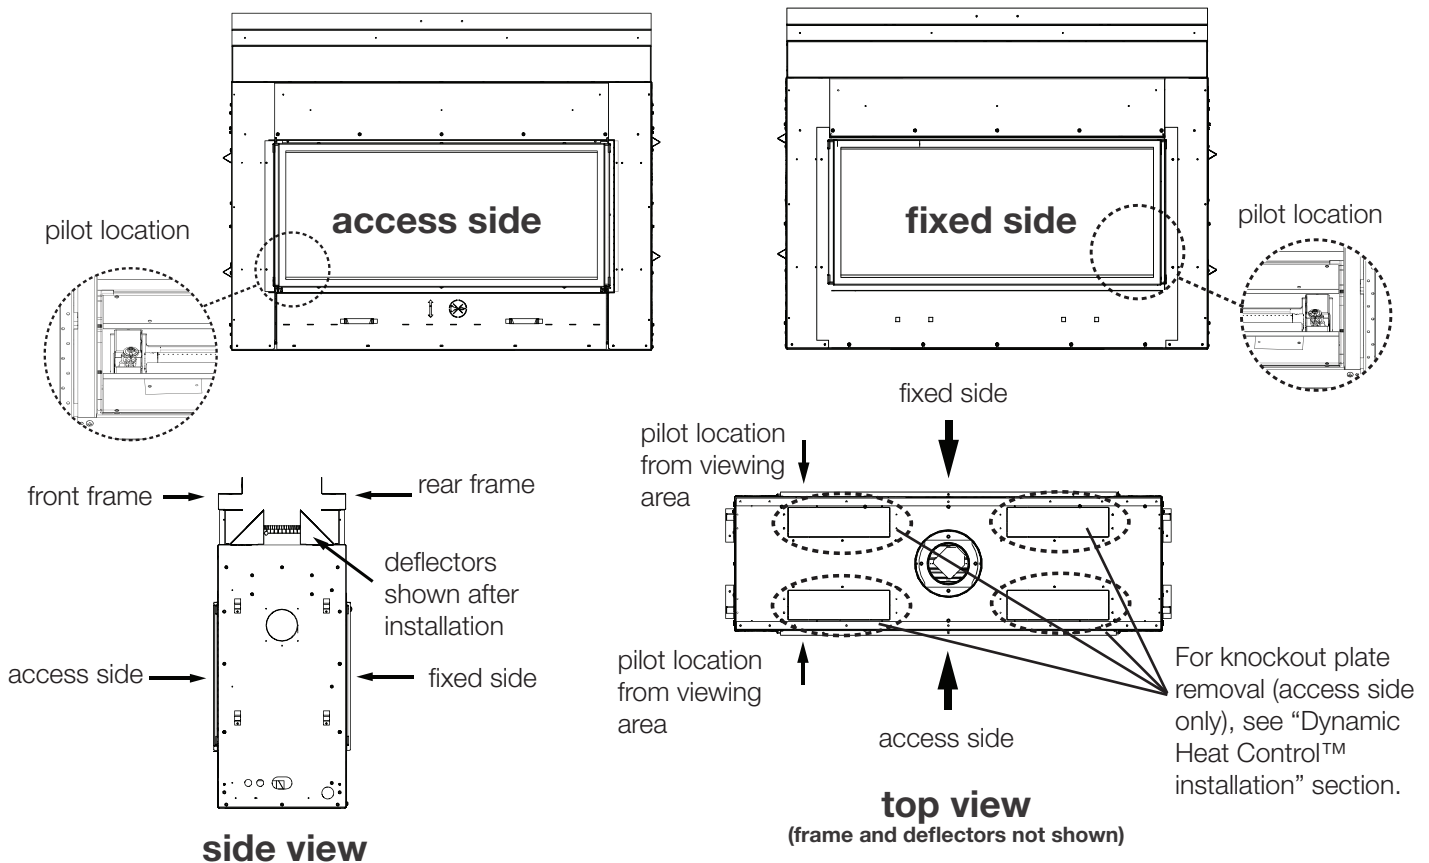


note:

The access side will have the pilot on the left side of the firebox from the viewing area.


4.0 Dynamic Heat Control™ installation EN

Before starting the Dynamic Heat Control™ installation, remove the safety barrier. Refer to “safety barrier installation/removal” section in the appliance installation manual.

SINGLE-SIDED MODEL ILLUSTRATED



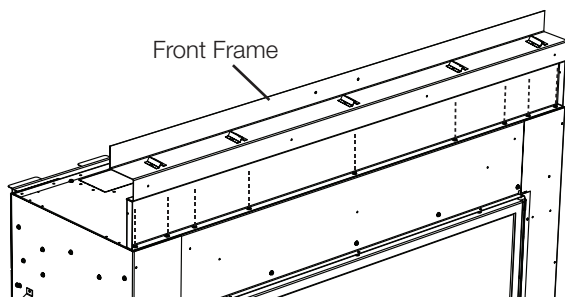


1.) Remove fasteners securing front frame (and rear frame for see-thru). **Do not discard fasteners.**

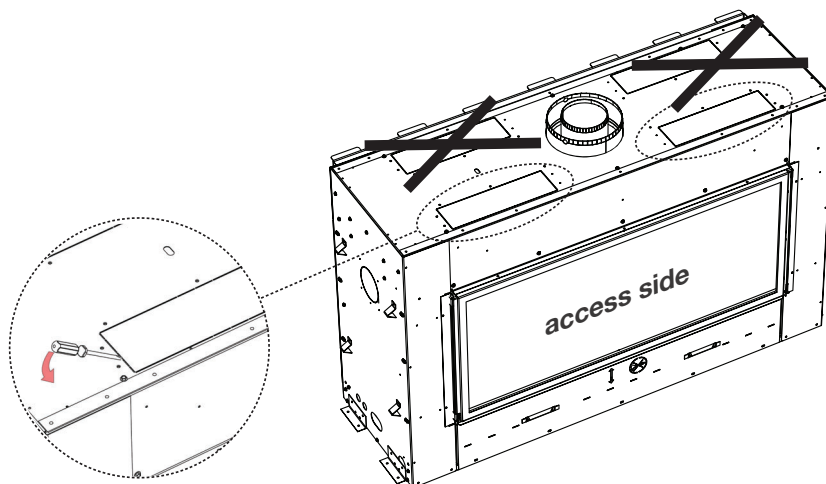

2.) Remove knockout plates **(FOR SINGLE-SIDED, ONLY REMOVE THE TWO KNOCKOUTS PLATES ON THE ACCESS SIDE)**. Discard knockout plates. **Recommended: Use a flathead screwdriver or a small pry bar and use prying motion to remove the knockout.** Use a brace such as a piece of wood under the prying tool to avoid distorting the top


SINGLE-SIDED MODEL ILLUSTRATED

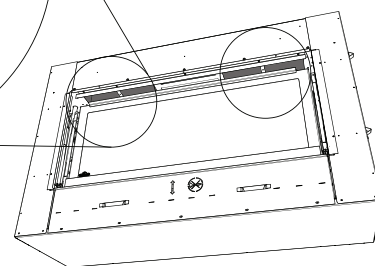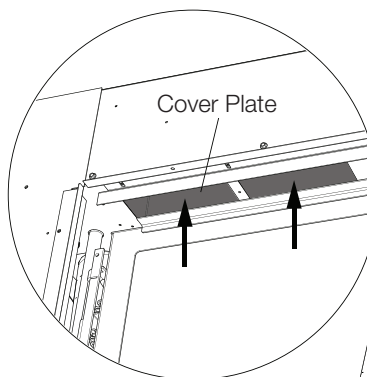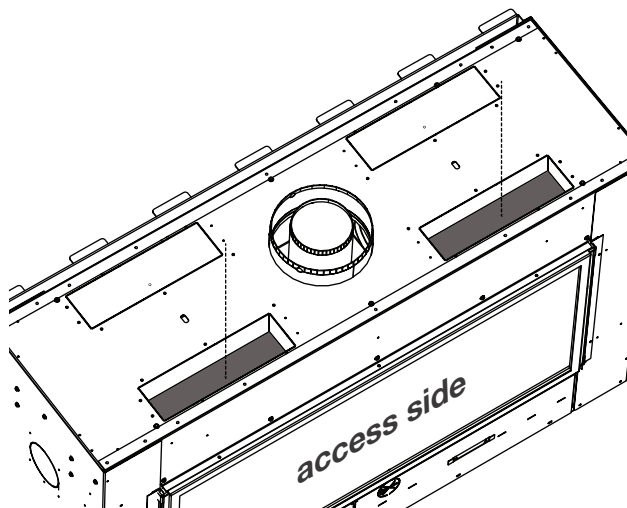

3.) Remove the fasteners securing the cover plates recessed below the knockout plates. For ease of removal, lift the panel from below in front of the firebox door. Discard cover plates.


IMPORTANT:

Fire Hazard Warning: This step is crucial for your appliance to work properly. If the knockout plates AND the cover plates are not removed from the access, the appliance will overheat, the barrier will become excessively hot, and the high limit switch will constantly trip.

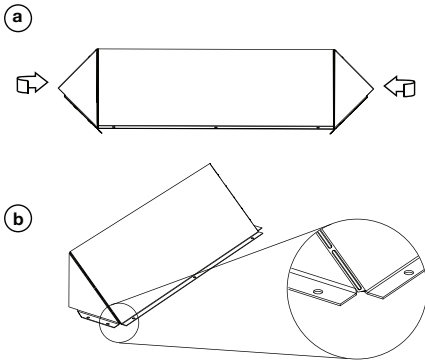


4.) Bend the sides of the deflectors as shown.

FOR LV38-1 / LV62

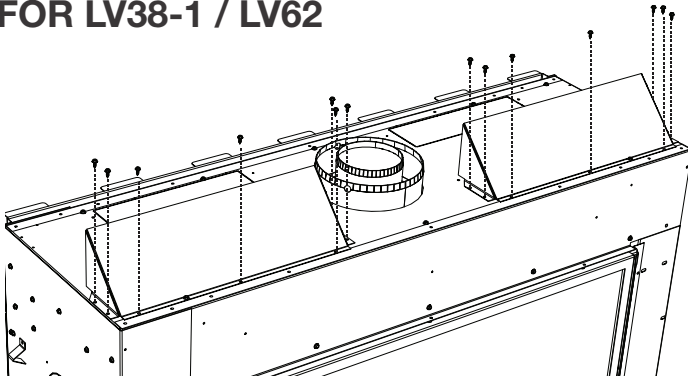


5.) Secure deflectors to the appliance with supplied fasteners as shown.

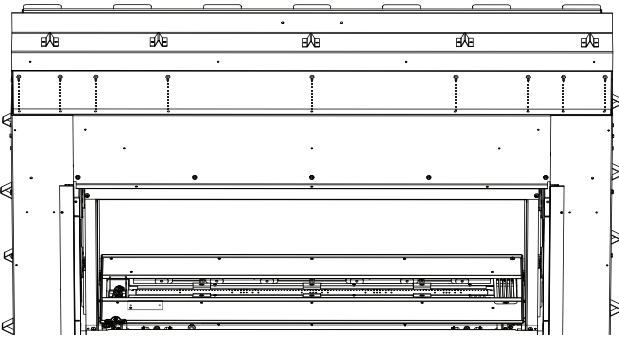


6.) Re-install front frame using the fasteners removed in step 1.


FOR LV50-2 / LV74

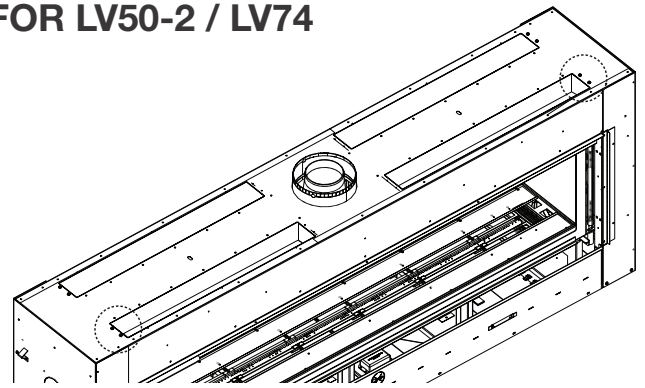

5.) Remove outer knockout fasteners. **Do not discard fasteners.**

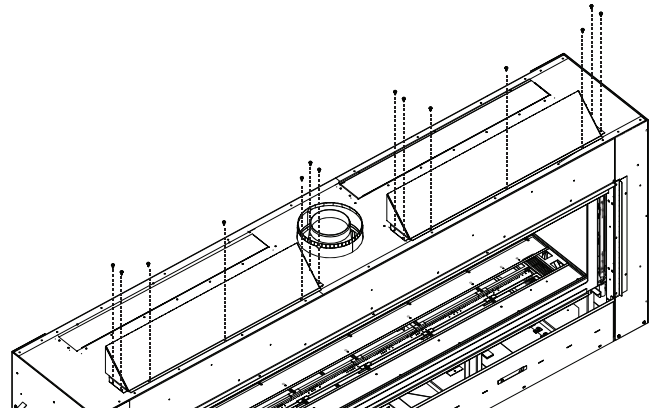

6.) Secure deflectors to the appliance with fasteners removed in step 5 and supplied fasteners.

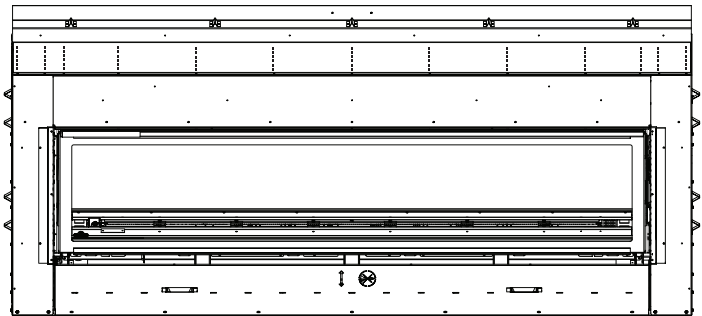

7.) Re-install front frame using the fasteners previously used in step 1.

! WARNING

- **FOR SEE-THRU APPLIANCES, REPEAT STEPS WITH THE FIXED SIDE.**



IMPORTANT:

It is recommended to install venting and vent heat shield(s) before refitting the front, (and where applicable rear), frame for ease of access. It is critical for see-thru appliances that **ALL 4 knockout plates, ALL 4 cover plates are removed and ALL 4 deflectors are installed.**


4.1 high limit switch installation

! WARNING


- High Limit Switch installation is MANDATORY. Failure to correctly install will cause a fire hazard.

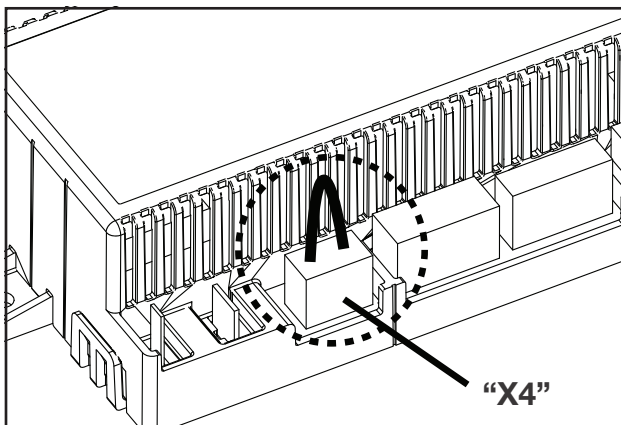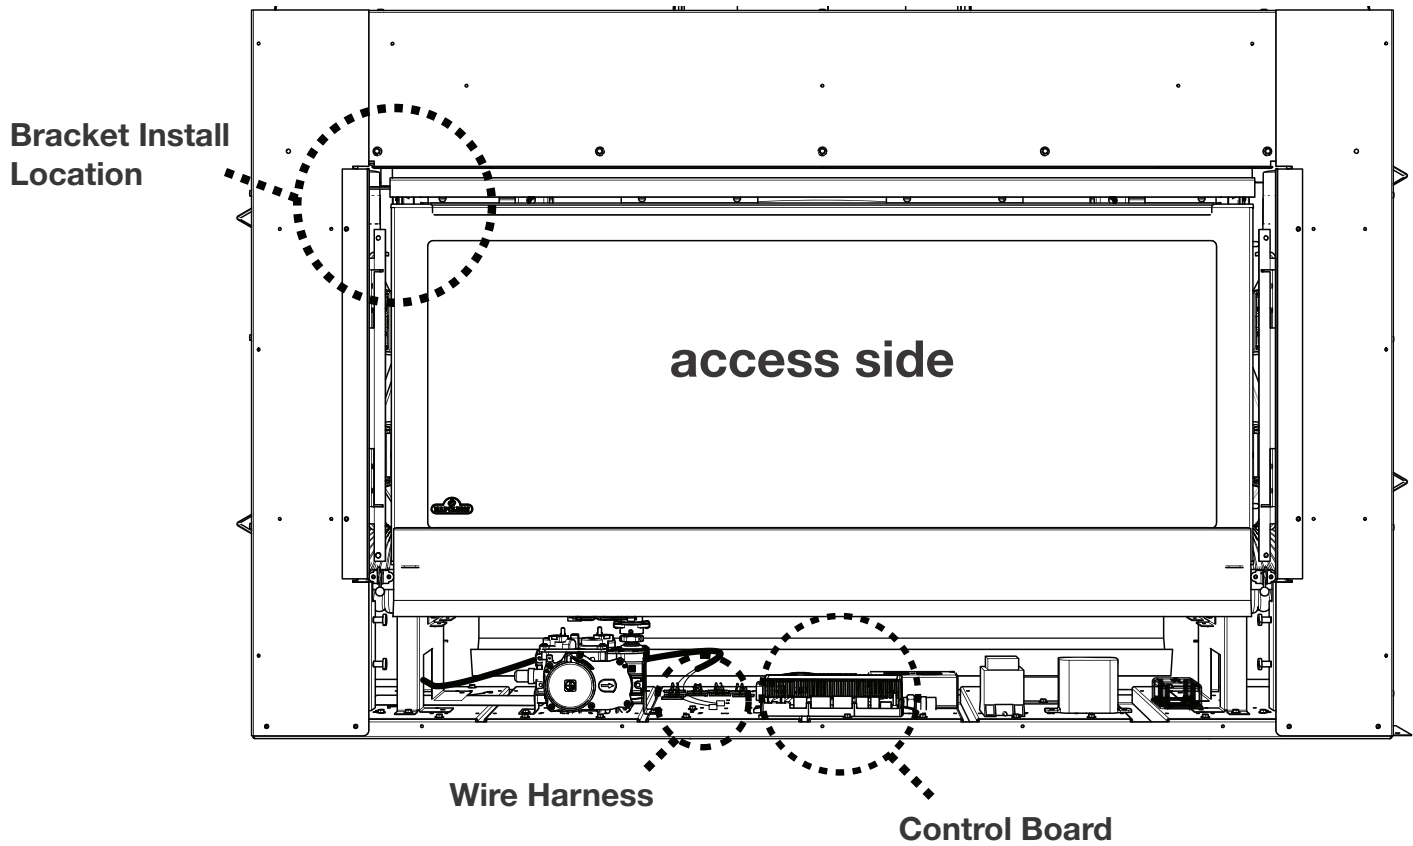


1.) Remove jumper plug from control board (marked "X4") and install plug with spade connectors to the control board. Discard the original jumper plug.

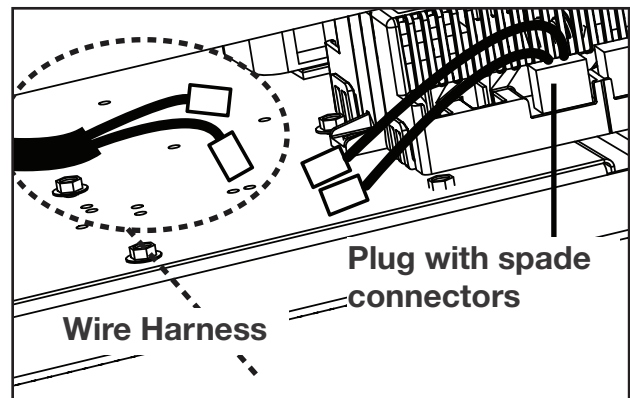


Dynamic Heat Control™ installation

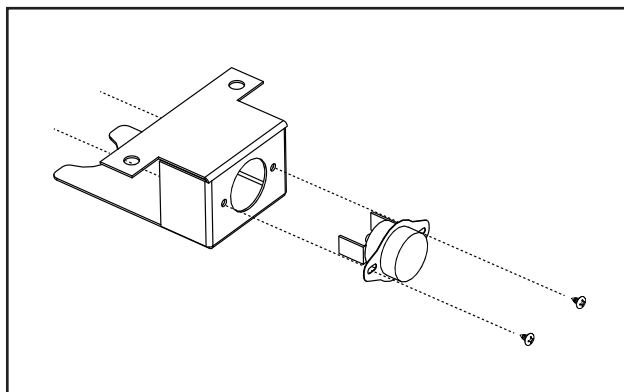

3.) Insert the high limit switch into the bracket and secure with two fasteners (supplied).

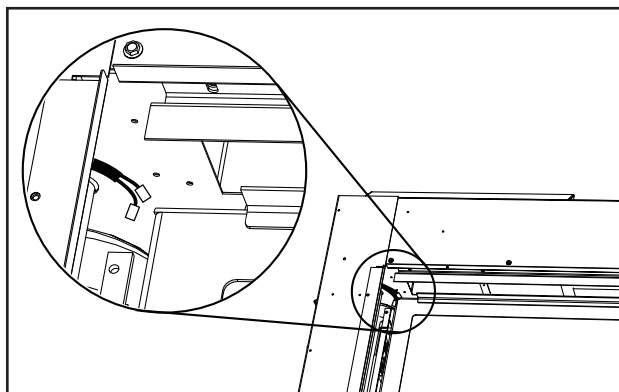

4.) Locate the existing wire harness in the upper left corner of the firebox (as illustrated). Connect wires to the high limit switch.

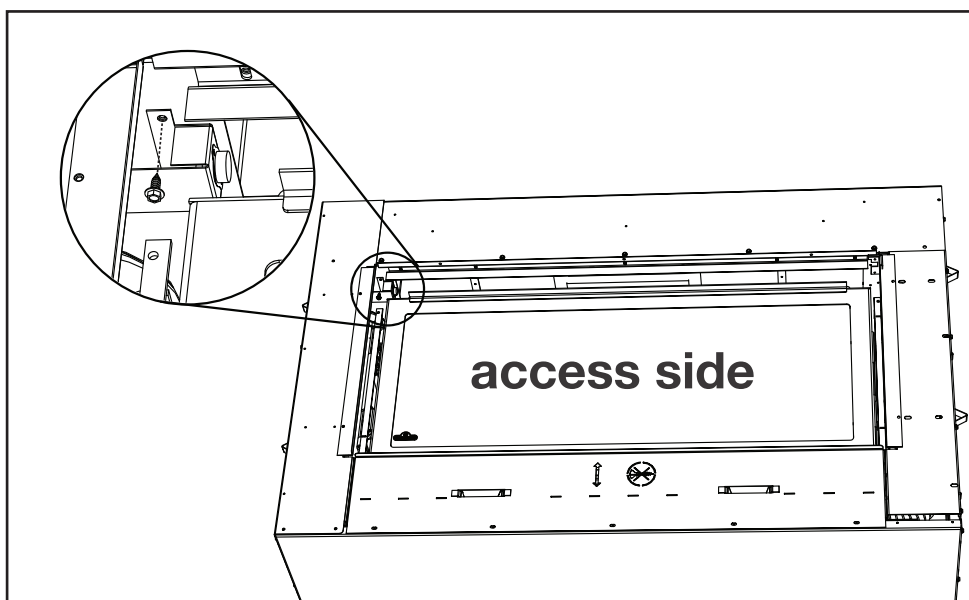

5.) Install high limit switch assembly to the bracket install location in the upper left hand corner of the appliance. Secure high limit switch assembly with a supplied screw as shown.

IMPORTANT:

After installing the Dynamic Heat Control™ system, ensure appliance is clean from dust, debris, etc. before continuing with the appliance installation. Take precautions to ensure framing or finishing dust and debris does not enter the air outlet openings or deflectors.

Check and clean appliance before operation.

Re-install safety barrier. Refer to "safety barrier installation / removal" in the appliance installation manual.

note:

When using optional finishing accessories, the framing dimensions and finishing materials may differ from what is outlined in the section below; refer to the leaflet instructions supplied in the accessory kit for specific framing and finishing specifications.


! WARNING

- Risk of fire!
- In order to avoid the possibility of exposed insulation or vapour barrier coming in contact with the appliance body, it is recommended that the walls of the appliance enclosure be "finished" (i.e. drywall / sheetrock), as you would finish any other outside wall of a home. This will ensure that clearance to combustibles is maintained within the cavity.
- Do not notch the framing around the appliance stand offs. Failure to maintain air space clearance may cause over heating and fire. Prevent contact with sagging or loose insulation or framing and other combustible materials. Block opening into the chase to prevent entry of blown-in insulation. Make sure insulation and other materials are secured.
- Minimum clearance to combustibles must be maintained or a serious fire hazard could result.

note:

For heavier finishing materials such as marble, we recommend adding extra support to the frame. Ensure there is adequate floor support for the appliance and finishing material.

minimum framing dimensions

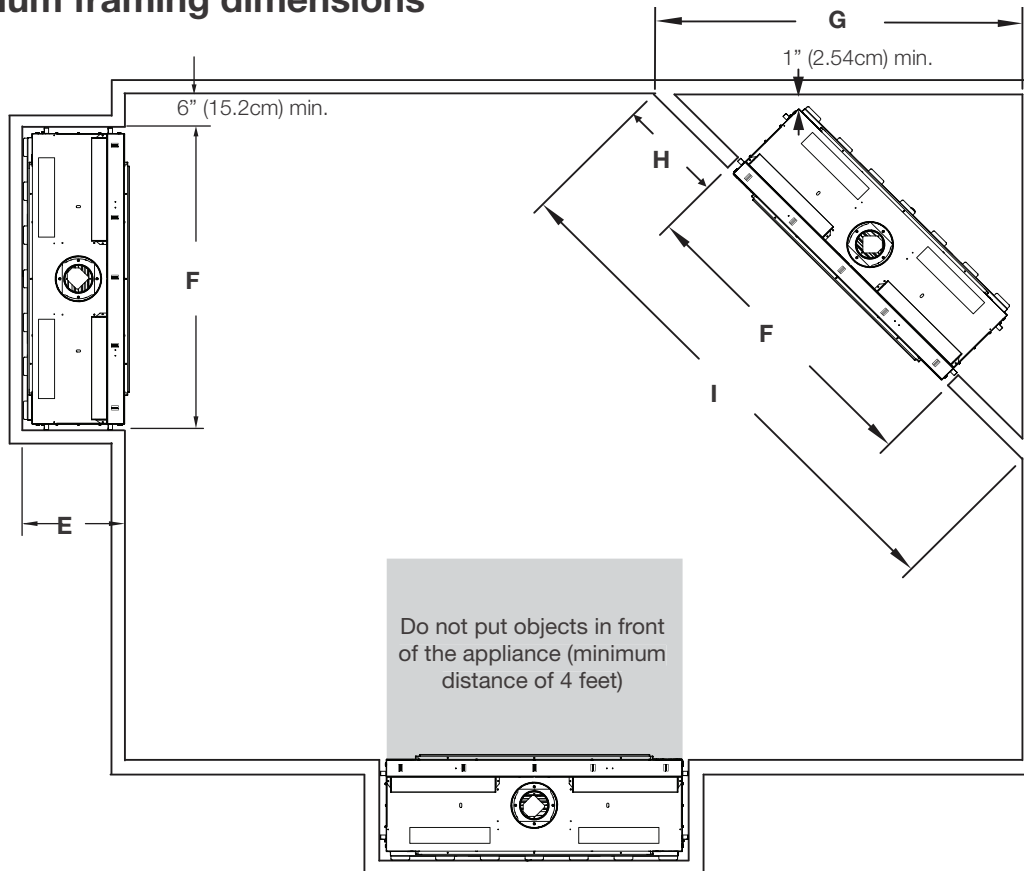

	LV38-1	LV50-2	LV62	LV74
E	20 1/8" (51.1cm)			
F	53 13/16" (136.7cm)	65 13/16" (167.2cm)	77 13/16" (197.6cm)	89 13/16" (228.1cm)
G	63 3/4" (162cm)	72 1/4" (183.5cm)	80 11/16" (205cm)	89 1/4" (226.6cm)
H	18 3/16" (46.2cm)			
I	90 3/16" (229cm)	102 3/16" (259.5cm)	114 1/8" (289.9cm)	126 1/8" (320.4cm)

6.0 minimum clearance to combustibles enclosures

single-sided

1" [25mm] minimum
all sides for sections
of vertical venting.

When passing through
a ceiling, use firestop
spacer W500-0028
(not supplied)

6" [152mm] minimum
(inside enclosure)

3" [76mm] top (outside
of enclosure)

2" [51mm] sides /
bottom (outside of en-
closure)

When passing through
a wall, use firestop
spacer assembly
W010-4178 (supplied)

0" to combustible
finishings such as brick
and stone. When using
non-combustible finish-
ings, only use firestop
spacer (W615-0162)
included in the firestop
assembly (W010-4178)

0" to side standoffs

1/2" finishing flange

0" to bottom of the
appliance

0" to back standoffs



Horizontal vent sections: A minimum clearance of 3" (76mm) on the top outside of the enclosure and 2" (51mm) on the sides and bottom outside of the enclosure all around the vent pipe on all horizontal runs to combustibles is required. Horizontal vent sections within enclosures require a minimum clearance of 6" (152mm) at the top of the vent pipe.

Vertical vent sections: A minimum of 1" (25mm) all around the vent pipe on all vertical runs to combustibles is required except for clearances in appliances enclosures. Vertical vent sections within enclosures require a minimum clearance of 1" (25mm) around the vent pipe.

minimum clearance

Ref	LV38-1	LV50-2	LV62	LV74
L	73" (185.4cm)		91" (231.1cm)	


note:

The LV series requires a minimum inside enclosure height, as illustrated (dimension L) measured from the bottom of the appliance. For temperature requirements, this area must be left unobstructed. Some venting configurations that require more vertical rise will require a larger enclosure to provide minimum vertical clearance between vent pipes and combustibles.

see-thru

1" [25mm] minimum all sides for sections of vertical venting.

When passing through a ceiling, use firestop spacer W500-0028 (not supplied)

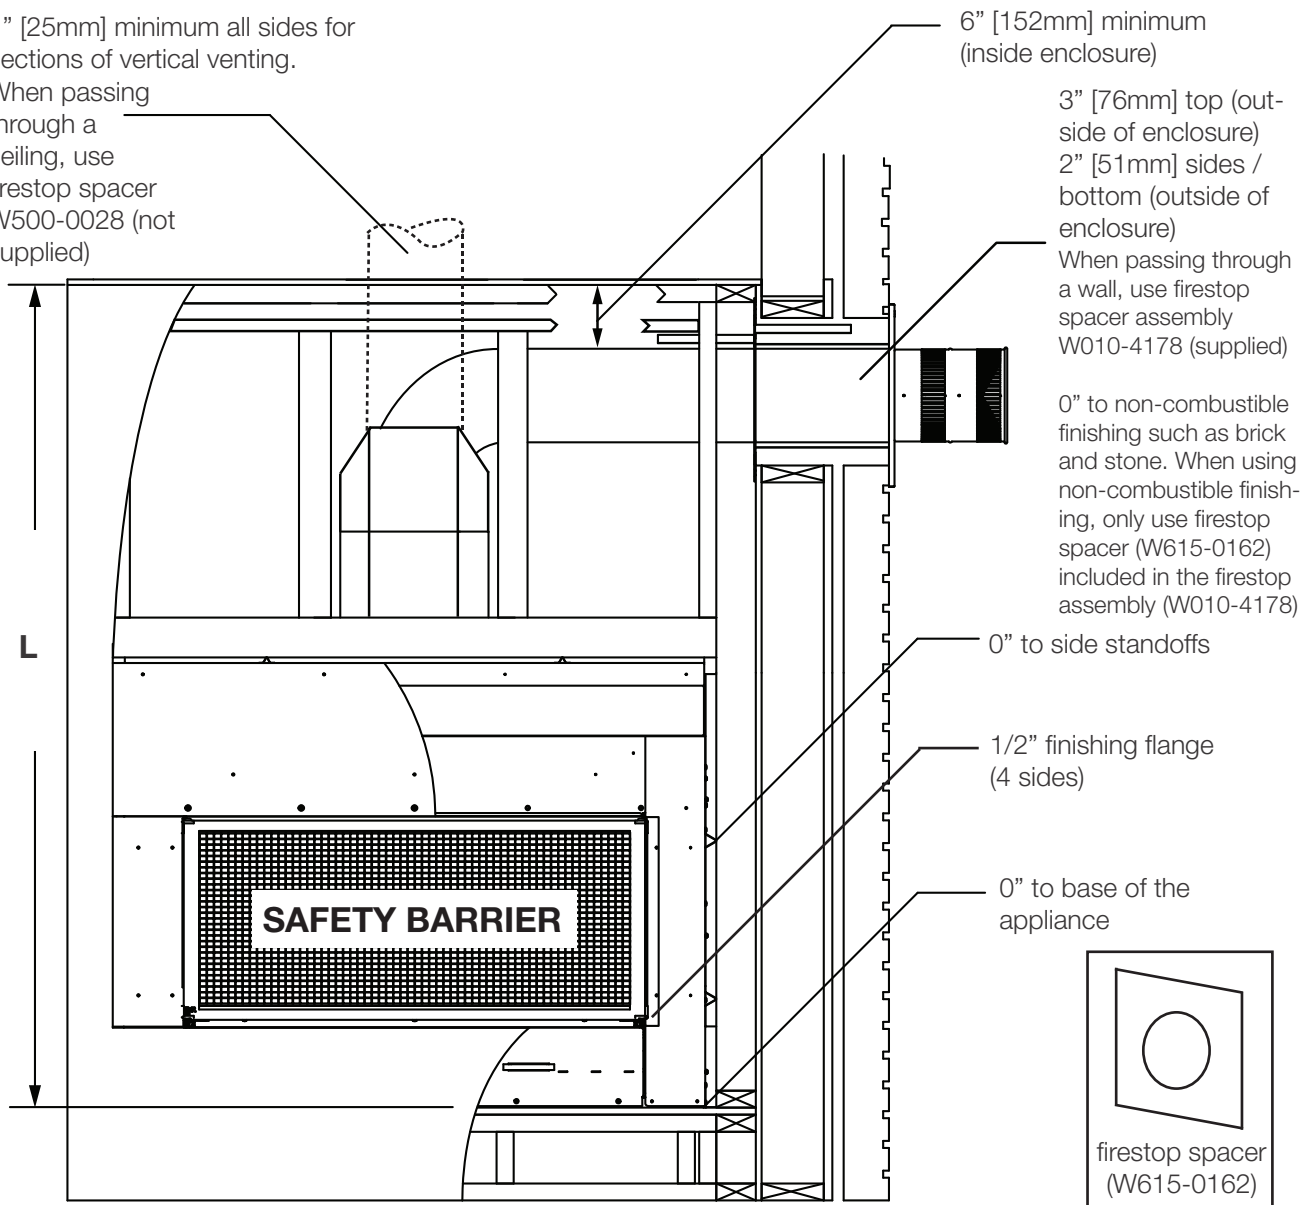

Horizontal vent sections: A minimum clearance of 3" (76mm) on the top outside of the enclosure and 2" (51mm) on the sides and bottom outside of the enclosure all around the vent pipe on all horizontal runs to combustibles is required. Horizontal vent sections within enclosures require a minimum clearance of 6" (152mm) at the top of the vent pipe.

Vertical vent sections: A minimum of 1" (25mm) all around the vent pipe on all vertical runs to combustibles is required except for clearances in appliances enclosures. Vertical vent sections within enclosures require a minimum clearance of 1" (25mm) around the vent pipe.

minimum clearance

Ref	LV38-1	LV50-2	LV62	LV74
L	73" (185.4cm)		91" (231.1cm)	


note:

The LV series requires a minimum inside enclosure height, as illustrated (dimension L) measured from the bottom of the appliance. For temperature requirements, this area must be left unobstructed. Some venting configurations that require more vertical rise will require a larger enclosure to provide minimum vertical clearance between vent pipes and combustibles.

7.0 rough framing - before appliance installation

Before framing your appliance, determine vent requirements before deciding the final location of the appliance. After rough framing, place the appliance in its final position. Also, see appliance manual for vent shield installation, nailing tabs installation, electrical installation, gas installation, etc.

single-sided

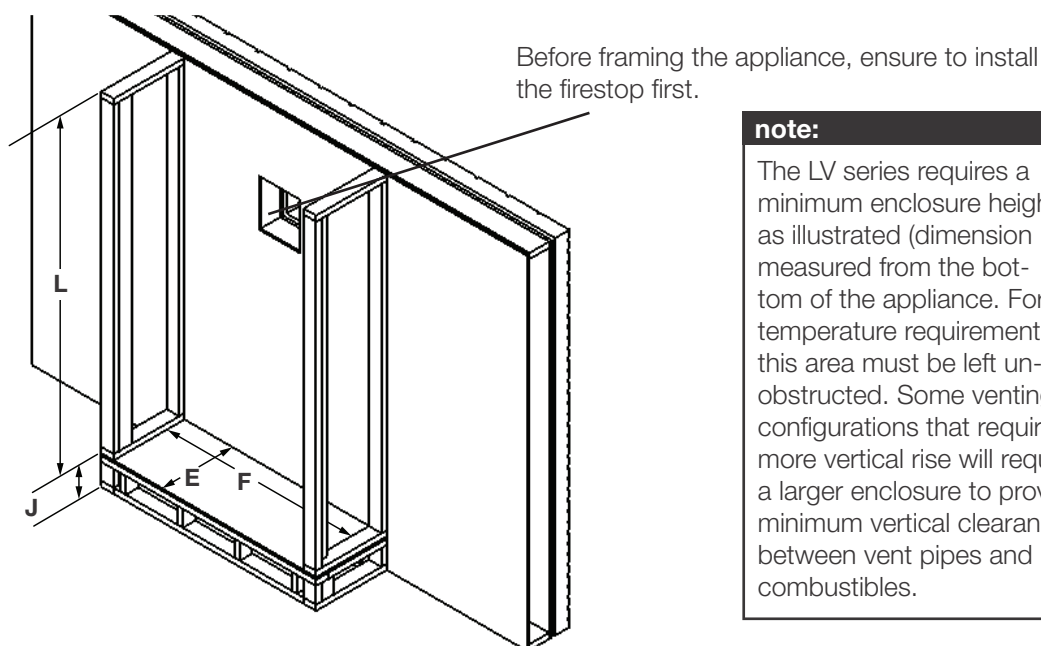


note:

The LV series requires a minimum enclosure height, as illustrated (dimension L), measured from the bottom of the appliance. For temperature requirements, this area must be left unobstructed. Some venting configurations that require more vertical rise will require a larger enclosure to provide minimum vertical clearance between vent pipes and combustibles.

Ref	LV38-1	LV50-2	LV62	LV74
E	20 1/8" (51.1cm)			
F	53 13/16" (136.7cm)	65 13/16" (167.2cm)	77 13/16" (197.6cm)	89 13/16" (228.1cm)
J	Optional - Appliance does not need to be elevated above floor			
L	73" (185.4cm)		91" (231.1cm)	

see-thru

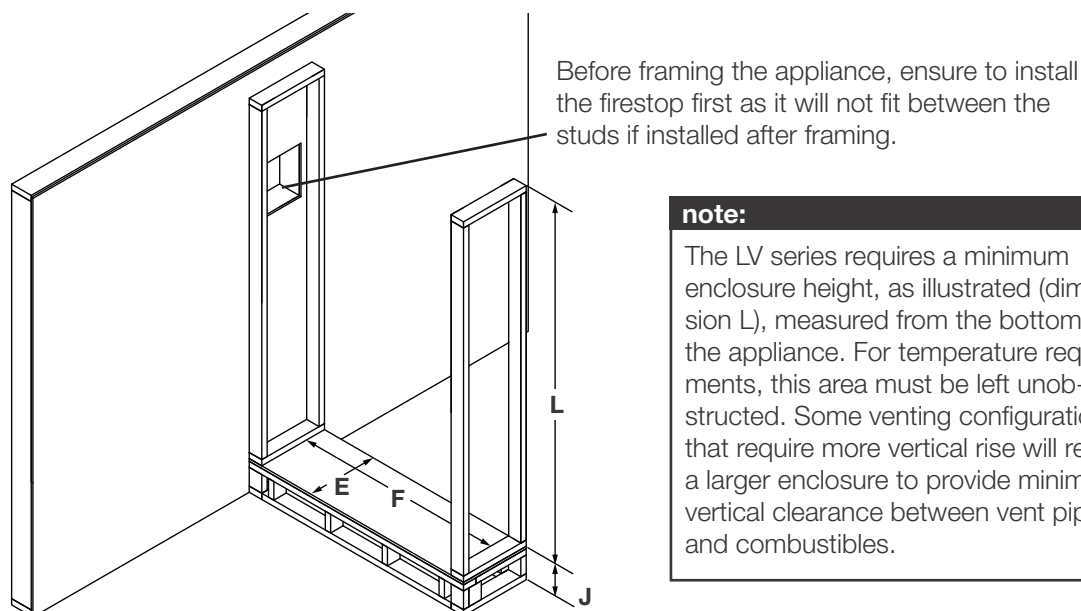

note:

The LV series requires a minimum enclosure height, as illustrated (dimension L), measured from the bottom of the appliance. For temperature requirements, this area must be left unobstructed. Some venting configurations that require more vertical rise will require a larger enclosure to provide minimum vertical clearance between vent pipes and combustibles.

Ref	LV38-1	LV50-2	LV62	LV74
E	16 3/16" (41.1cm)			
F	53 13/16" (136.7cm)	65 13/16" (167.2cm)	77 13/16" (197.6cm)	89 13/16" (228.1cm)
J	Optional - Appliance does not need to be elevated above floor			
L	73" (185.4cm)		91" (231.1cm)	

8.0 finish framing - after appliance installation

EN

There are various methods to ventilate the enclosure. Refer to "installation planning" section. Only one option is illustrated (**Installation Option 2** - front opening).


The appliance must be installed at this point of framing. Appliance is not shown to better illustrate framing.

single-sided flush

note:

Finish framing **must** be built after appliance has been placed in its final position and venting connected.

The LV series requires a minimum enclosure height, as illustrated (dimension L), measured from the bottom of the appliance. For temperature requirements, this area must be left unobstructed. Some venting configurations that require more vertical rise will require a larger enclosure to provide minimum vertical clearance between vent pipes and combustibles.

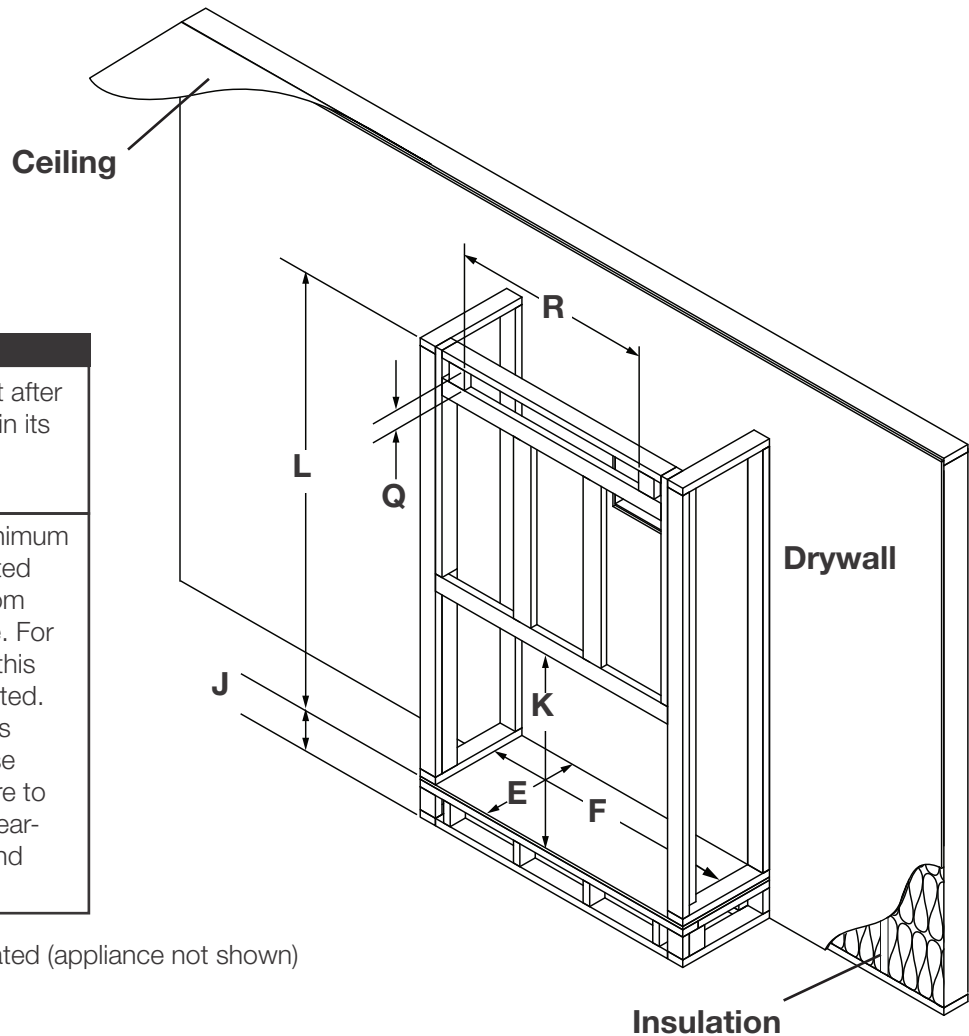

Installation Option 2 illustrated (appliance not shown)

minimum framing

Ref	LV38-1	LV50-2	LV62	LV74
K	39 15/16" (101.4cm)			
E	20 1/8" (51.1cm)			
F	53 13/16" (136.7cm)	65 13/16" (167.2cm)	77 13/16" (197.6cm)	89 13/16" (228.1cm)
J	Optional - Appliance does not need to be elevated above floor			
L	73" (185.4cm)		91" (231.1cm)	
Q*	2" min and 3" max			
(Q x R)*	80 sq. in.		160 sq. in.	

* ONLY APPLICABLE TO OPTION 2 AND 3 - Opening **must** be centered in enclosure on appliance. Dimensions represent finished sizes and where applicable should be adjusted to include finish material thickness.

EN finish framing - after appliance installation

single-sided recessed


! WARNING

- Shaded components (finish framing) **must** be non-combustible materials.

note:

Finish framing **must** be built after appliance has been placed in its final position and venting connected.

This configuration also requires recess area to use non-combustible facing due to close proximity to vent.

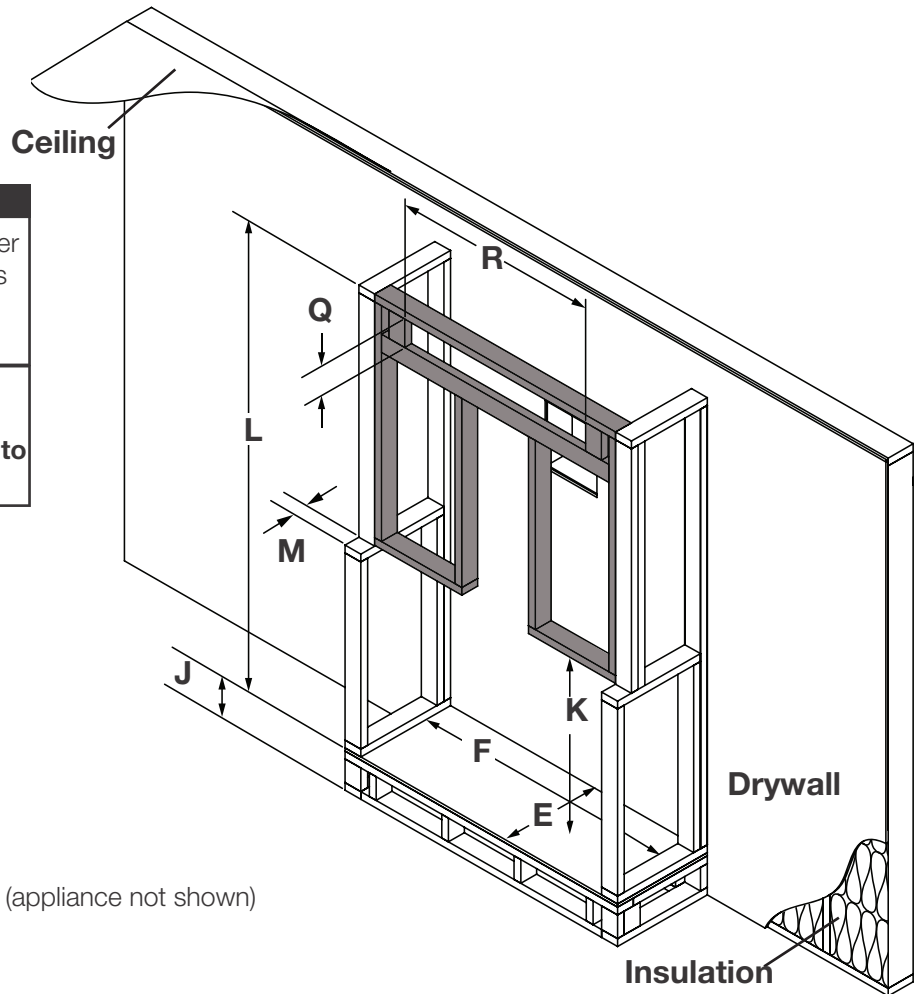

Installation Option 2 illustrated (appliance not shown)

minimum framing

Ref	LV38-1	LV50-2	LV62	LV74
K	39 15/16" (101.4cm)			
E	20 1/8" (51.1cm)			
F	53 13/16" (136.7cm)	65 13/16" (167.2cm)	77 13/16" (197.6cm)	89 13/16" (228.1cm)
J	Optional - Appliance does not need to be elevated above floor			
L	73" (185.4cm)		91" (231.1cm)	
Q*	2" min and 3" max			
(Q x R)*	80 sq. in.		160 sq. in.	
M**	3" (76mm)			


* ONLY APPLICABLE TO OPTION 2 AND 3 - Opening **must** be centered in enclosure on appliance. Dimensions represent finished sizes and where applicable should be adjusted to include finish material thickness.

** Can only be increased to 4" max by building a protrusion.

note:

The LV series requires a minimum enclosure height, as illustrated (dimension L), measured from the bottom of the appliance. For temperature requirements, this area must be left unobstructed. Some venting configurations that require more vertical rise will require a larger enclosure to provide minimum vertical clearance between vent pipes and combustibles.

see-thru flush

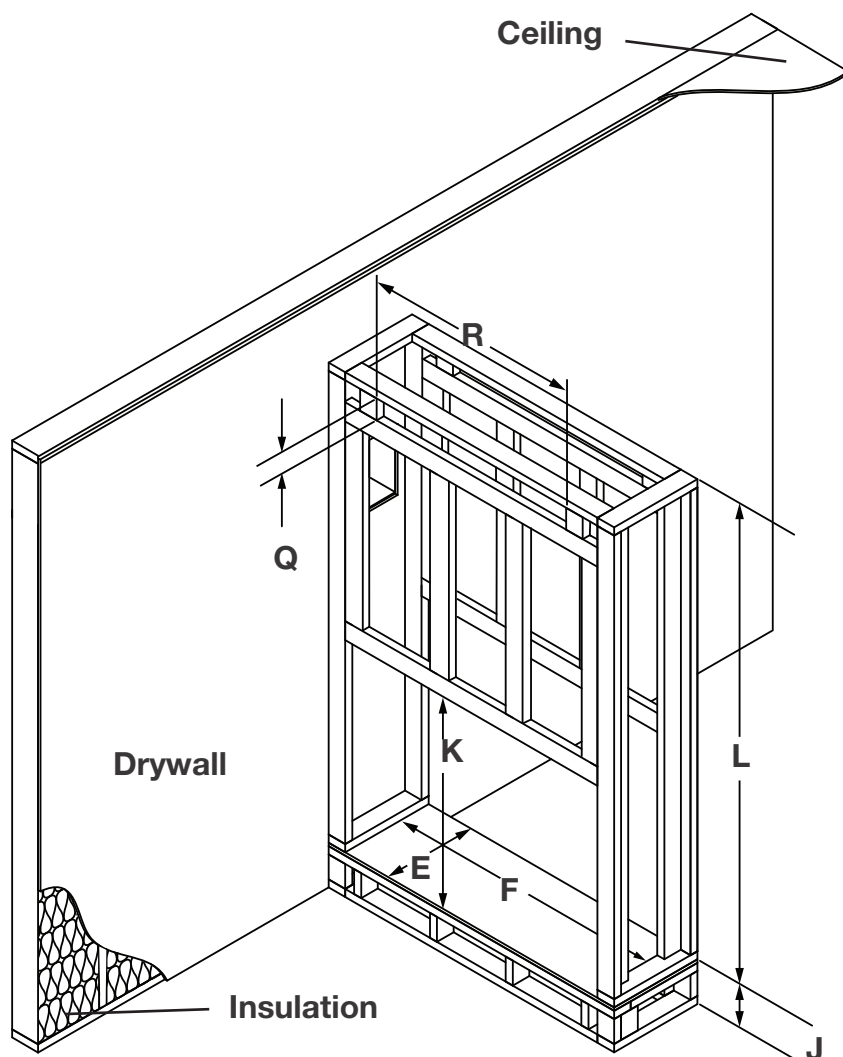

note:

Finish framing **must** be built after appliance has been placed in its final position and venting connected.

Installation Option 2 illustrated
(appliance not shown)

minimum framing


Ref	LV38-1	LV50-2	LV62	LV74
K	39 15/16" (101.4cm)			
E	16 3/16" (41.1cm)			
F	53 13/16" (136.7cm)	65 13/16" (167.2cm)	77 13/16" (197.6cm)	89 13/16" (228.1cm)
J	Optional - Appliance does not need to be elevated above floor			
L	73" (185.4cm)		91" (231.1cm)	
Q*	2" min and 3" max			
(Q x R)*	80 sq. in.		160 sq. in.	

* ONLY APPLICABLE TO OPTION 2 AND 3 - Opening **must** be centered in enclosure on appliance. Dimensions represent finished sizes and where applicable should be adjusted to include finish material thickness.

note:

The LV series requires a minimum enclosure height, as illustrated (dimension L), measured from the bottom of the appliance. For temperature requirements, this area must be left unobstructed. Some venting configurations that require more vertical rise will require a larger enclosure to provide minimum vertical clearance between vent pipes and combustibles.

EN finish framing - after appliance installation see-thru built out

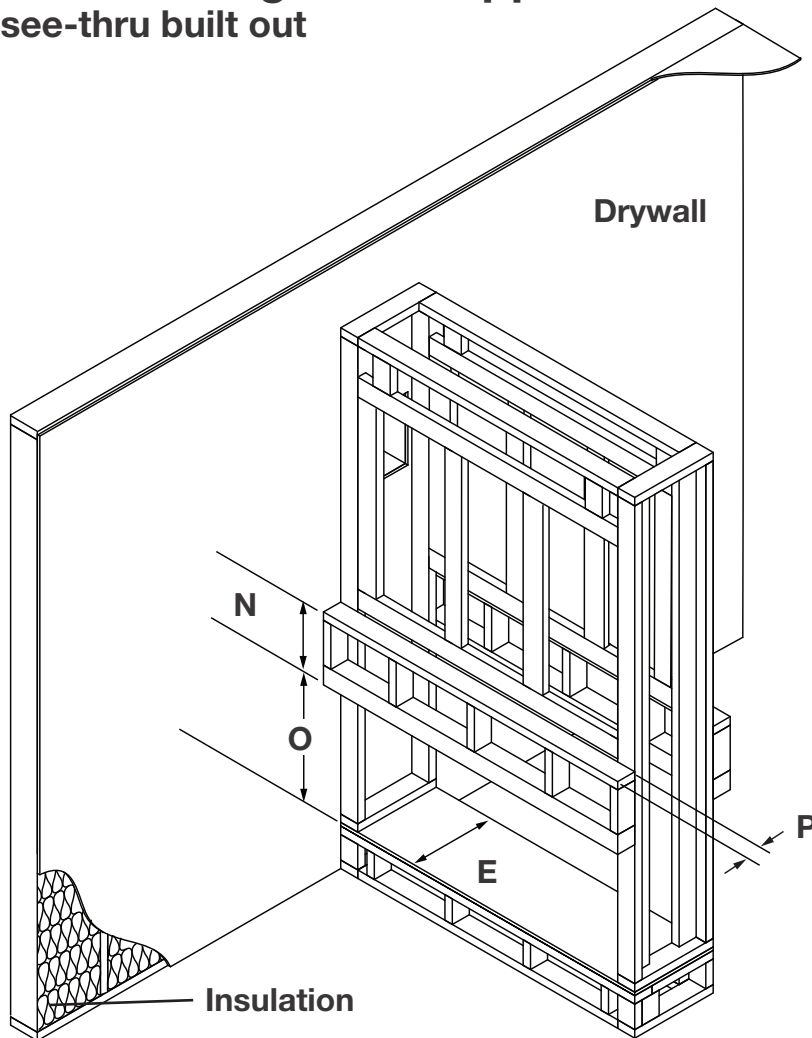

note:

Finish framing **must** be built after appliance has been placed in its final position and venting connected.

Installation Option 2 illustrated (appliance not shown)

minimum framing

Ref	LV38-1	LV50-2	LV62	LV74
E	16 3/16" (41.1cm)			
N* / **	14 1/4" (36.2m)			
O*	25 11/16 (65.2cm)			
P*	4" (10.1cm) Max			

* Finishing material must be considered with the protrusion (i.e. P includes framing and finish material). If desired, side and bottom protrusions can be done with 4" (10.1cm) Max.

** This is a recommended minimum dimension when mounting heat-sensitive objects above the appliance, see "finishing" and "minimum combustible mantel clearances" sections particularly when mounting electronic objects. Otherwise, the built out section can be as minimal as desired.

note:


When finished, **protrusions must never encroach inside the appliance finishing flange** as this will impede the fitment of the safety barrier and safe operation. See "finishing" section in the installation manual.

note:

The LV series requires a minimum enclosure height, as illustrated (dimension L), measured from the bottom of the appliance. For temperature requirements, this area must be left unobstructed. Some venting configurations that require more vertical rise will require a larger enclosure to provide minimum vertical clearance between vent pipes and combustibles.

wiring locations


TV applications were tested with the minimum enclosure dimensions and the maximum recess permissible. This data is provided in good faith and is not a guarantee for every application and television. Care and consideration should be taken when planning these installations to ensure the temperatures around the TV meet all manufacturer's recommended operating temperatures. Increasing the height of the mantel and/or TV above the fireplace opening, the protrusion of mantel and the volume of the enclosure all have the effect of reducing the temperature above the fireplace.

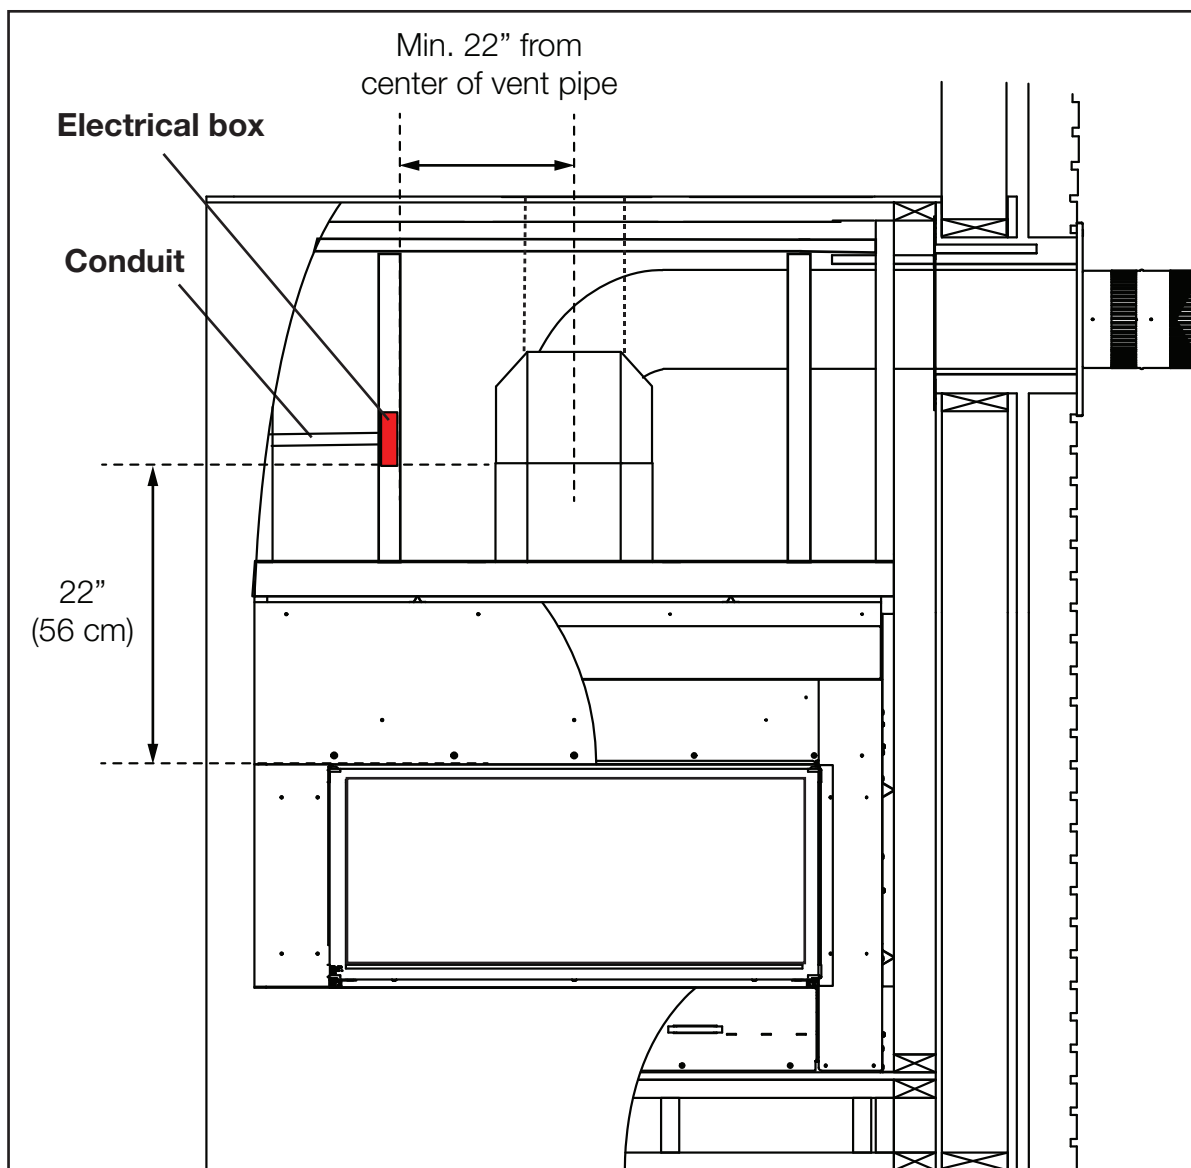

9.0 fastener placement restriction

WARNING

- Risk of fire!
- Never obstruct the front opening of the appliance.
- The front of the appliance must be finished with any non-combustible materials such as brick, marble, granite, etc., provided that these materials do not go below the specified dimension, as illustrated.
- Do not strike, slam, or scratch. Do not operate appliance with glass removed, cracked, or scratched.
- Facing and/or finishing material must never overhang into the appliance opening.
- The glass door assembly is a safety device designed to pivot forward when relieving excess pressure that might occur. Finishing or other materials must not be located in the opening surrounding the door as this will interfere with the doors ability to relieve pressure.
- If applicable, drywall dust will penetrate into the blower bearings, causing irreparable damage. Care must be taken to prevent drywall dust from coming into contact with the blower or its compartment. Any damage resulting from this condition is not covered by the warranty policy.

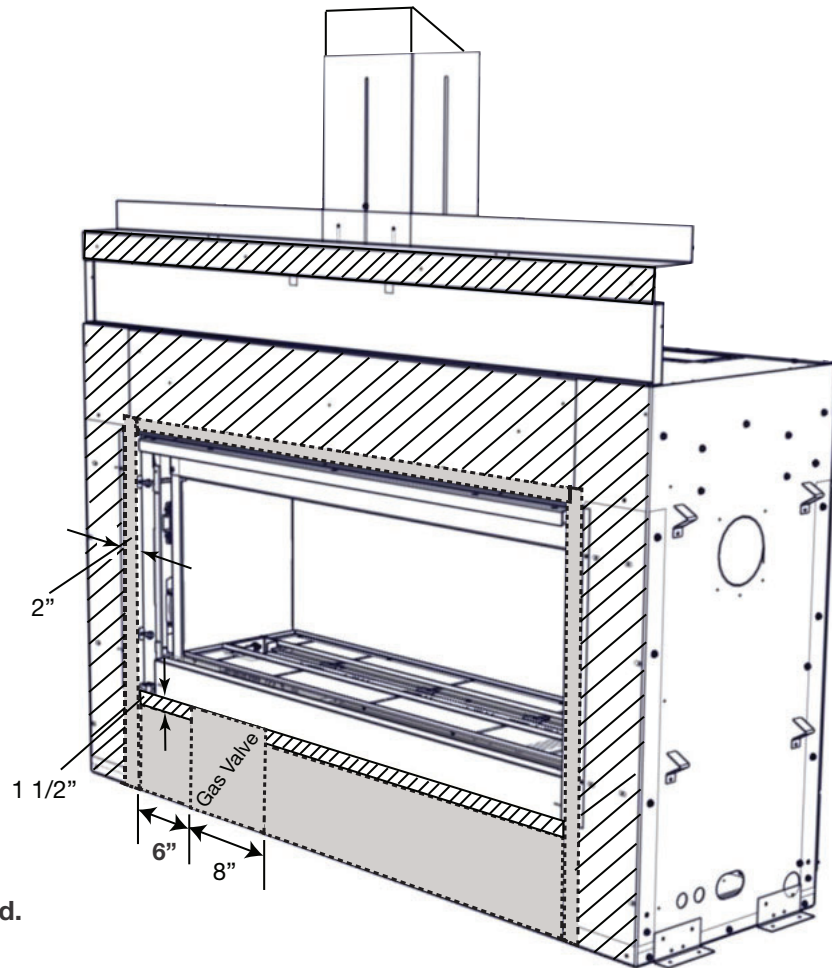

No fasteners permitted.




No fasteners permitted with greater than 3/4" penetration into appliance.

When securing non-combustibles, we suggest using high temperature construction adhesive within 2" (5.08cm) above and to the sides from the appliance opening and 8" (20.3cm) below the appliance opening. **DO NOT SCREW IN THE RESTRICTED AREA AS THIS COULD DAMAGE THE INTERNAL COMPONENTS OF THE APPLIANCE THAT CAN CAUSE INJURY OR DEATH.**

This applies to both single-sided and see-thru appliances.

Maximum screw length to be used outside the restricted screw area is 3/4" greater than finishing material thickness.(i.e. no fastener permitted that penetrates the appliance more than 3/4"

With Dynamic Heat Control™, you can finish the appliance with any combustible materials except appliances with recessed installation. Air outlet opening must be located out of reach of the user. Air outlet opening **must** not be restricted by furnishings or decor.

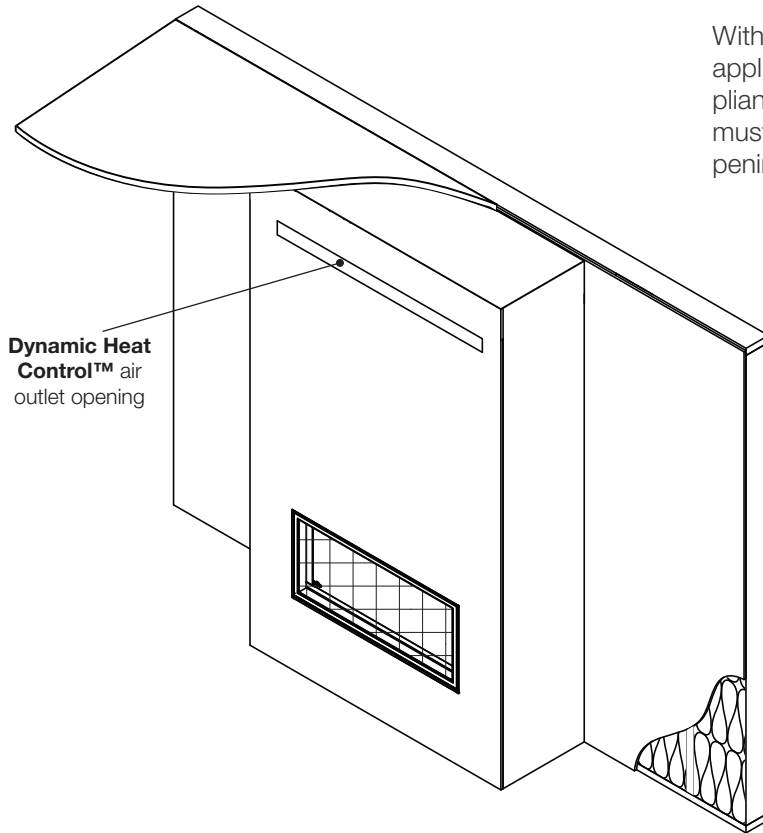


Recessed installation with Dynamic Heat Control™

! WARNING

- Shaded area must be non-combustible materials.


SHADED AREA MUST BE NON-COMBUSTIBLE MATERIALS. Recessed installation **requires** recess material to use non-combustible facing due to close proximity to vent. Air outlet opening must be located out of reach of the user. Air outlet opening **must** not be restricted by furnishings or decor.

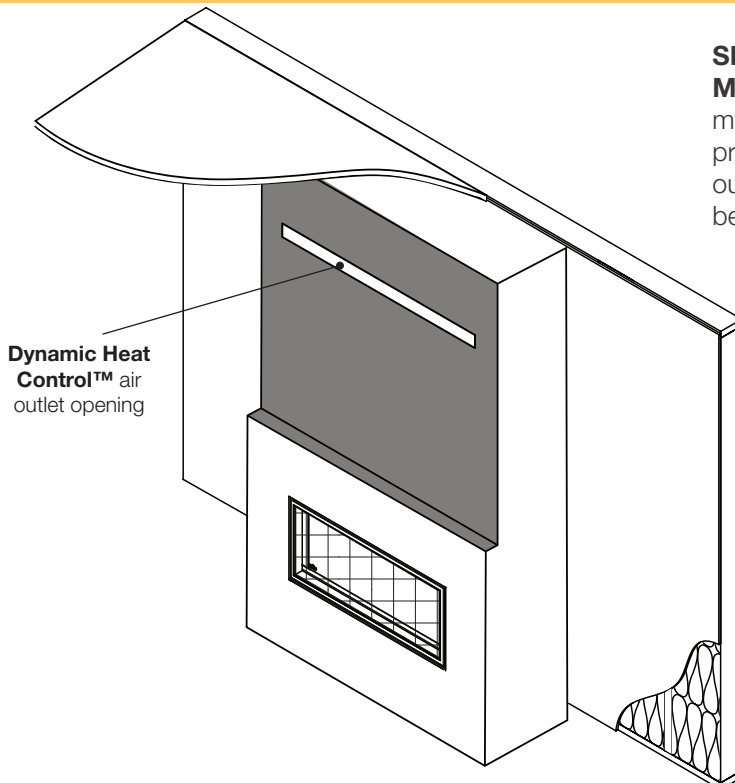

10.1 enclosure design

Additional openings in the enclosure are not acceptable since the DHC™ system relies on the “chimney effect” created through the appliance and the enclosure.

By adding additional air inlet(s) to an enclosure, air can bypass the appliance, which increases the operating temperature of the appliance and around the appliance opening. This is counterproductive to the benefits of heat management and, in extreme cases, the appliance may become hot enough for the high limit switch to trip.

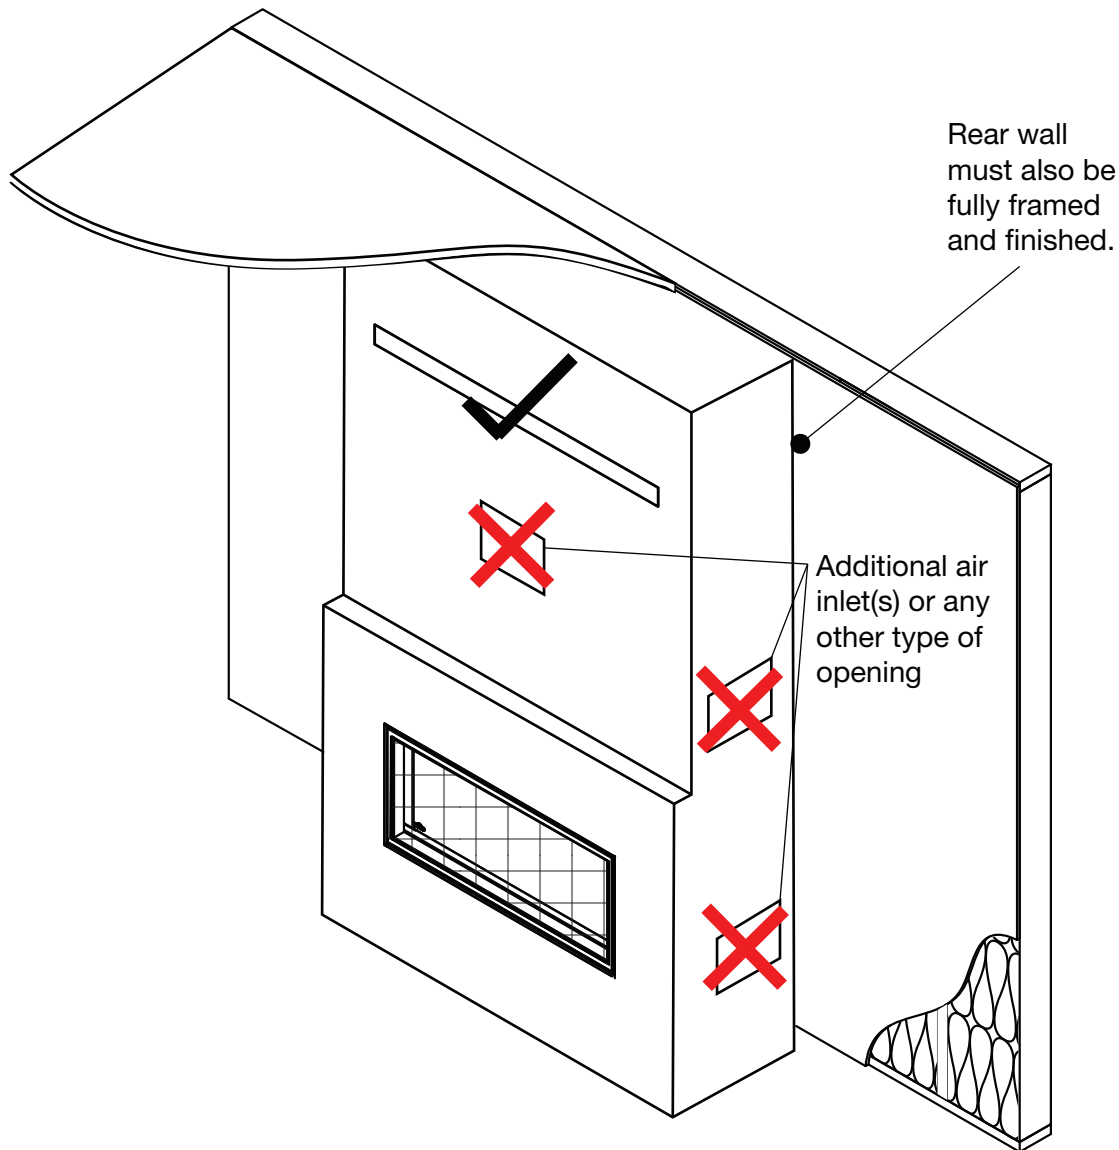

note:


The outside of the enclosure must be finished on all four sides and must include a complete floor.

10.2 optional trim finishing

When the appliance is installed with the front (or rear) air outlet opening, a decorative trim kit is available to finish your installation. The trim kit can be painted as an accent colour or to blend in with room decor.

The minimum air opening area must be maintained after the finishing material has been installed.

Contact your local authorized dealer for more information.

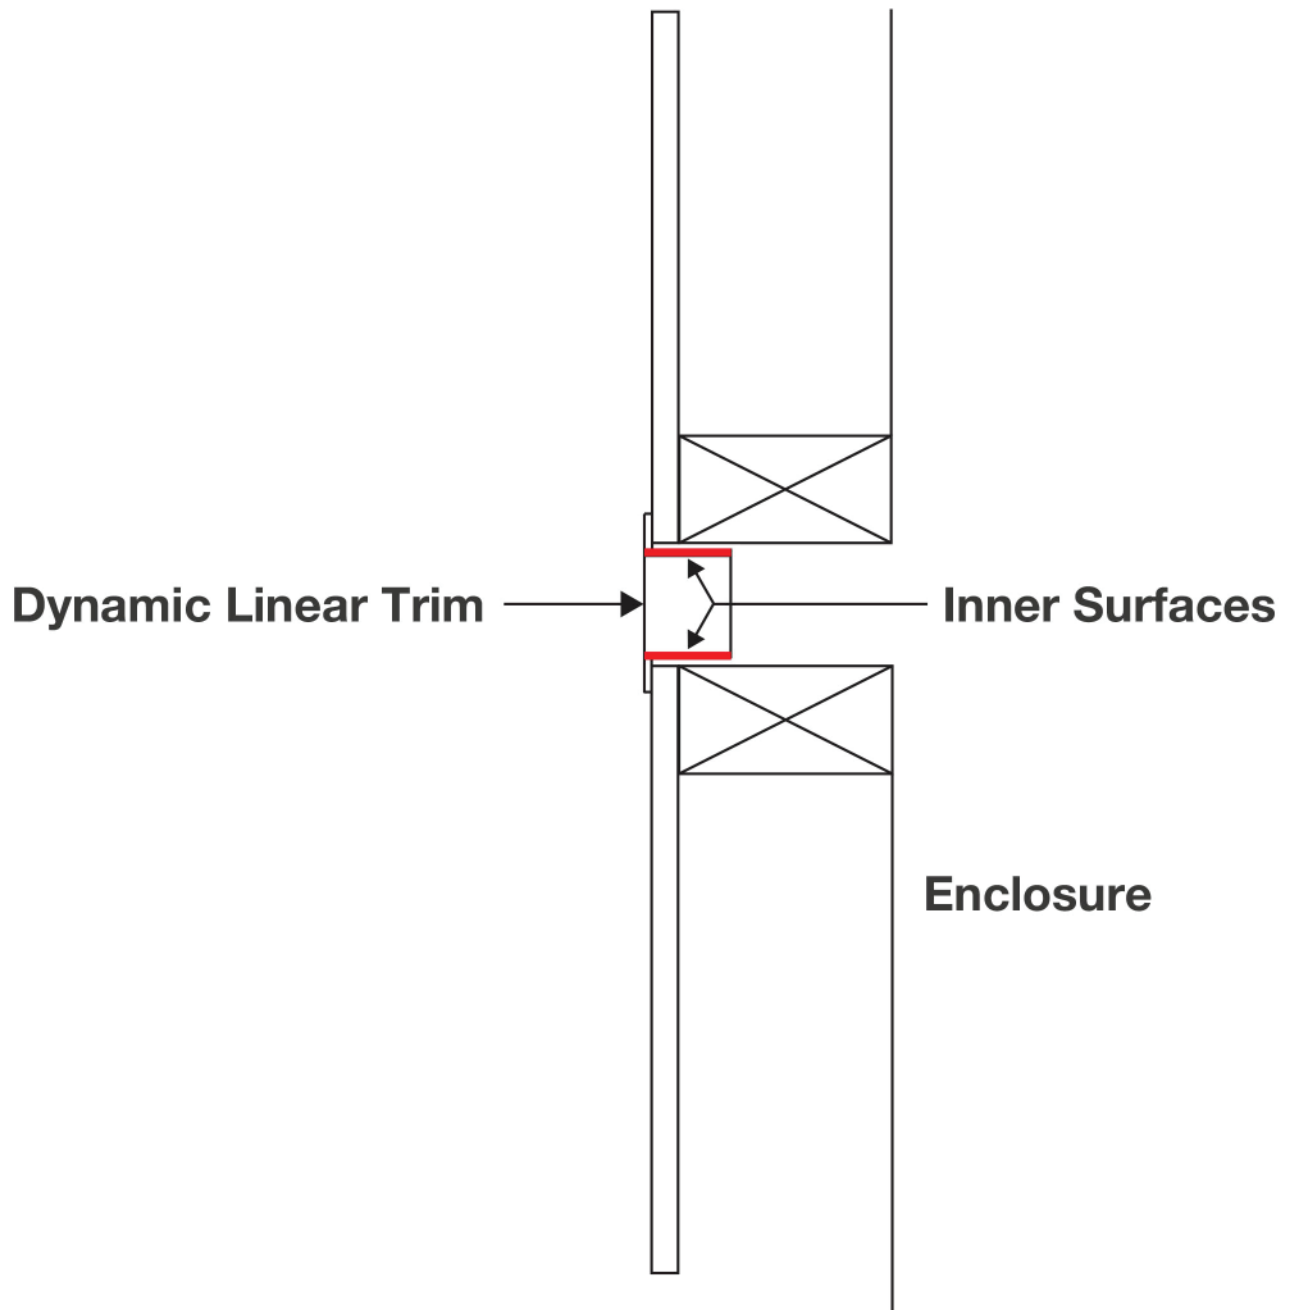


note:

The inner surfaces may be visible.

11.0 minimum combustible mantel clearances


! WARNING

- Risk of fire. Maintain all specified air space clearances to combustibles. Failure to comply with these instructions may cause a fire or cause the appliance to overheat. Ensure all clearances (i.e. back, side, top, vent, mantel, front, etc.) are clearly maintained.
- When using paint or lacquer to finish the mantel, the paint or lacquer must be heat resistant to prevent discolouration.
- Installing a television or other electronics above the appliance may cause discolouration, melting, or damage to the electronics. Use clearances as guidelines and refer to your TV manufacturer's instructions for further information.

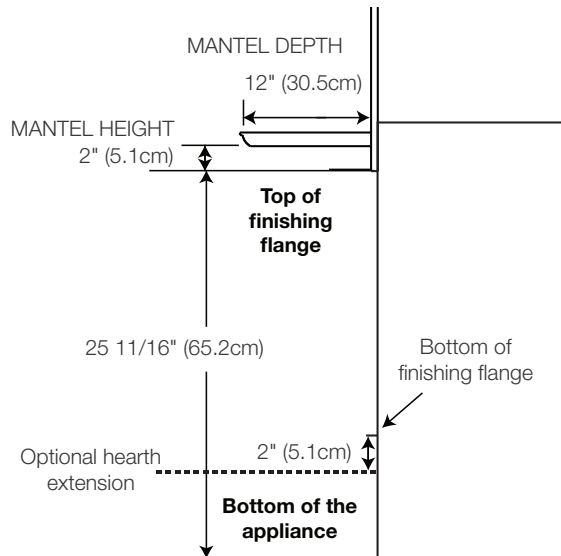


Installing a mantel between this appliance and electronics or other materials that may be sensitive to heat, will reduce the effect of direct heat on them. Follow mantel height and depth instructions for proper clearance information. A non-combustible mantel is considered a non-combustible protrusion.

Electronics, picture frames, decors, or other wall-mounted objects must be 6" below the air outlet opening and 6" above the finishing flange.

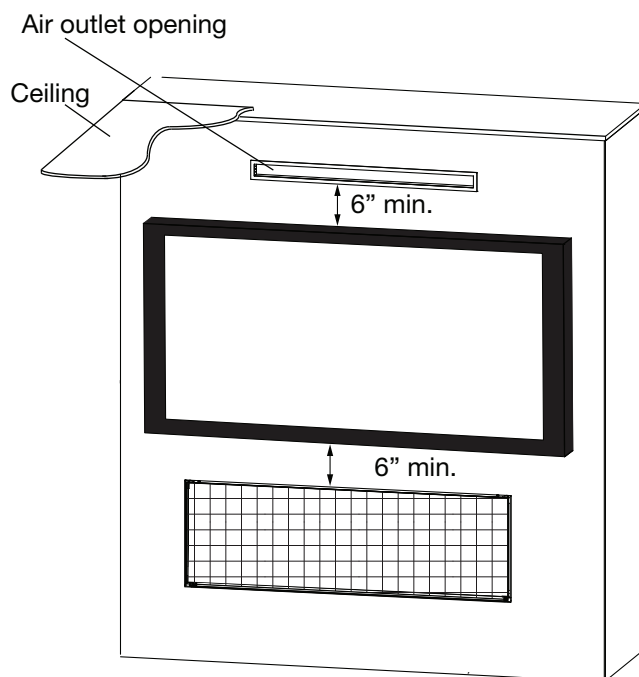

! WARNING

- Finishing material tight to the frame around the finishing flange must not project more than 4" (38mm) from the face of the safety barrier (above the door and sides only).

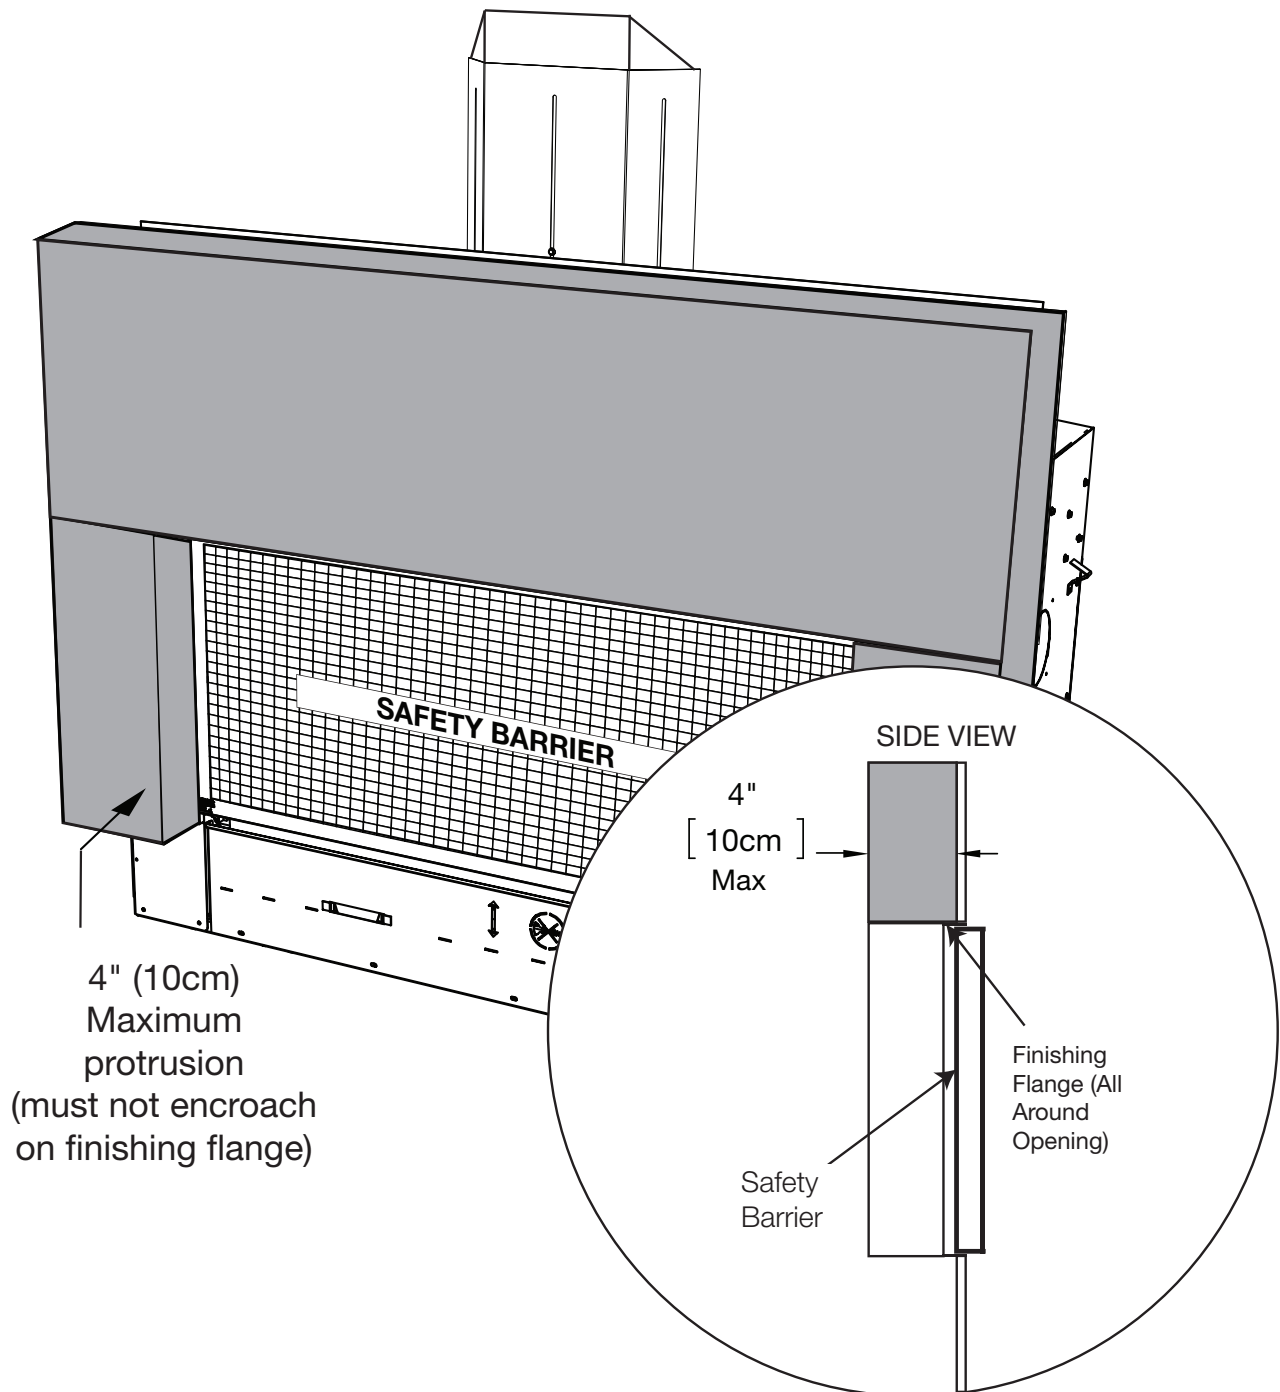


13.0 Dynamic Heat Control™ installation checklist

SINGLE-SIDED


! WARNING

- Ensure knockout plates on the fixed side are not removed or damaged (single-sided only).

- ☐ Front frame installed
- ☐ 2 knockout plates removed (Access side only)
- ☐ 2 cover plates removed (Access side only)
- ☐ 2 deflectors installed (Access side only)
- ☐ 2 knockout plates undamaged (Fixed side only)
- ☐ High limit switch installed (Access side only)
- ☐ Wire harness connected to high limit switch and control board.
- ☐ Install Safety Barrier
- ☐ Frame the appliance
- ☐ Clean all dust and debris
- ☐ Finish the appliance
- ☐ Installation of **Dynamic Heat Control™** recorded in owner's manual.

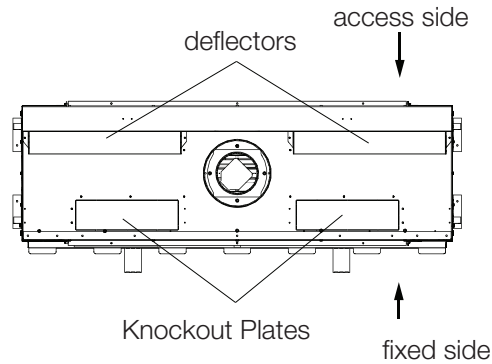


top view

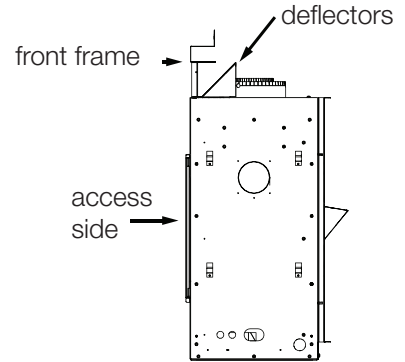


side view

SEE-THRU

- ☐ Front & rear frame installed
- ☐ 4 knockout plates removed
- ☐ 4 cover plates removed
- ☐ 4 deflectors installed
- ☐ High limit switch installed (Access side only)
- ☐ Wire harness connected to high limit switch and control board.
- ☐ Install Safety Barrier
- ☐ Frame the appliance
- ☐ Clean all dust and debris
- ☐ Finish the appliance
- ☐ Installation of **Dynamic Heat Control™** recorded in owner's manual.

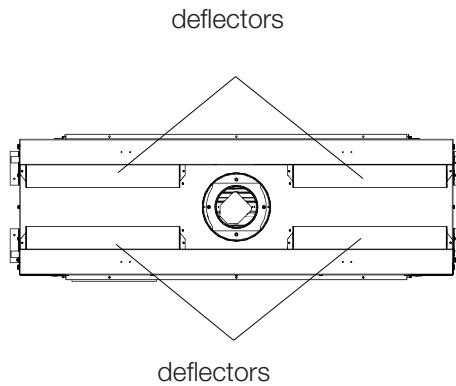

top view

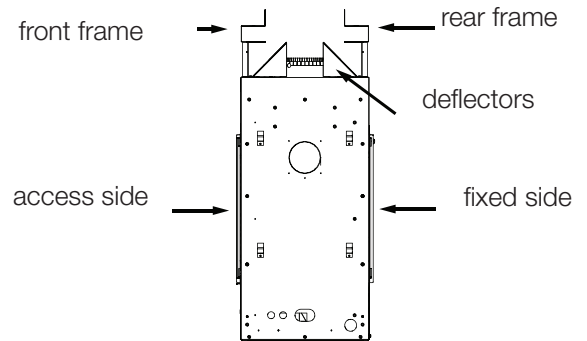

side view

[illegible]

NAPOLEON CELEBRATING OVER 40 YEARS OF HOME COMFORT PRODUCTS



7200, Route Transcanadienne, Montréal, Québec H4T 1A3
24 Napoleon Road, Barrie, Ontario, Canada L4M 0G8
214 Bayview Drive, Barrie, Ontario, Canada L4N 4Y8
103 Miller Drive, Crittenden, Kentucky, USA 41030
De Riemsdijk 22, 4004 LC Tiel, The Netherlands

Phone: 1-866-820-8686
napoleon.com